


INSTALLATION MANUAL

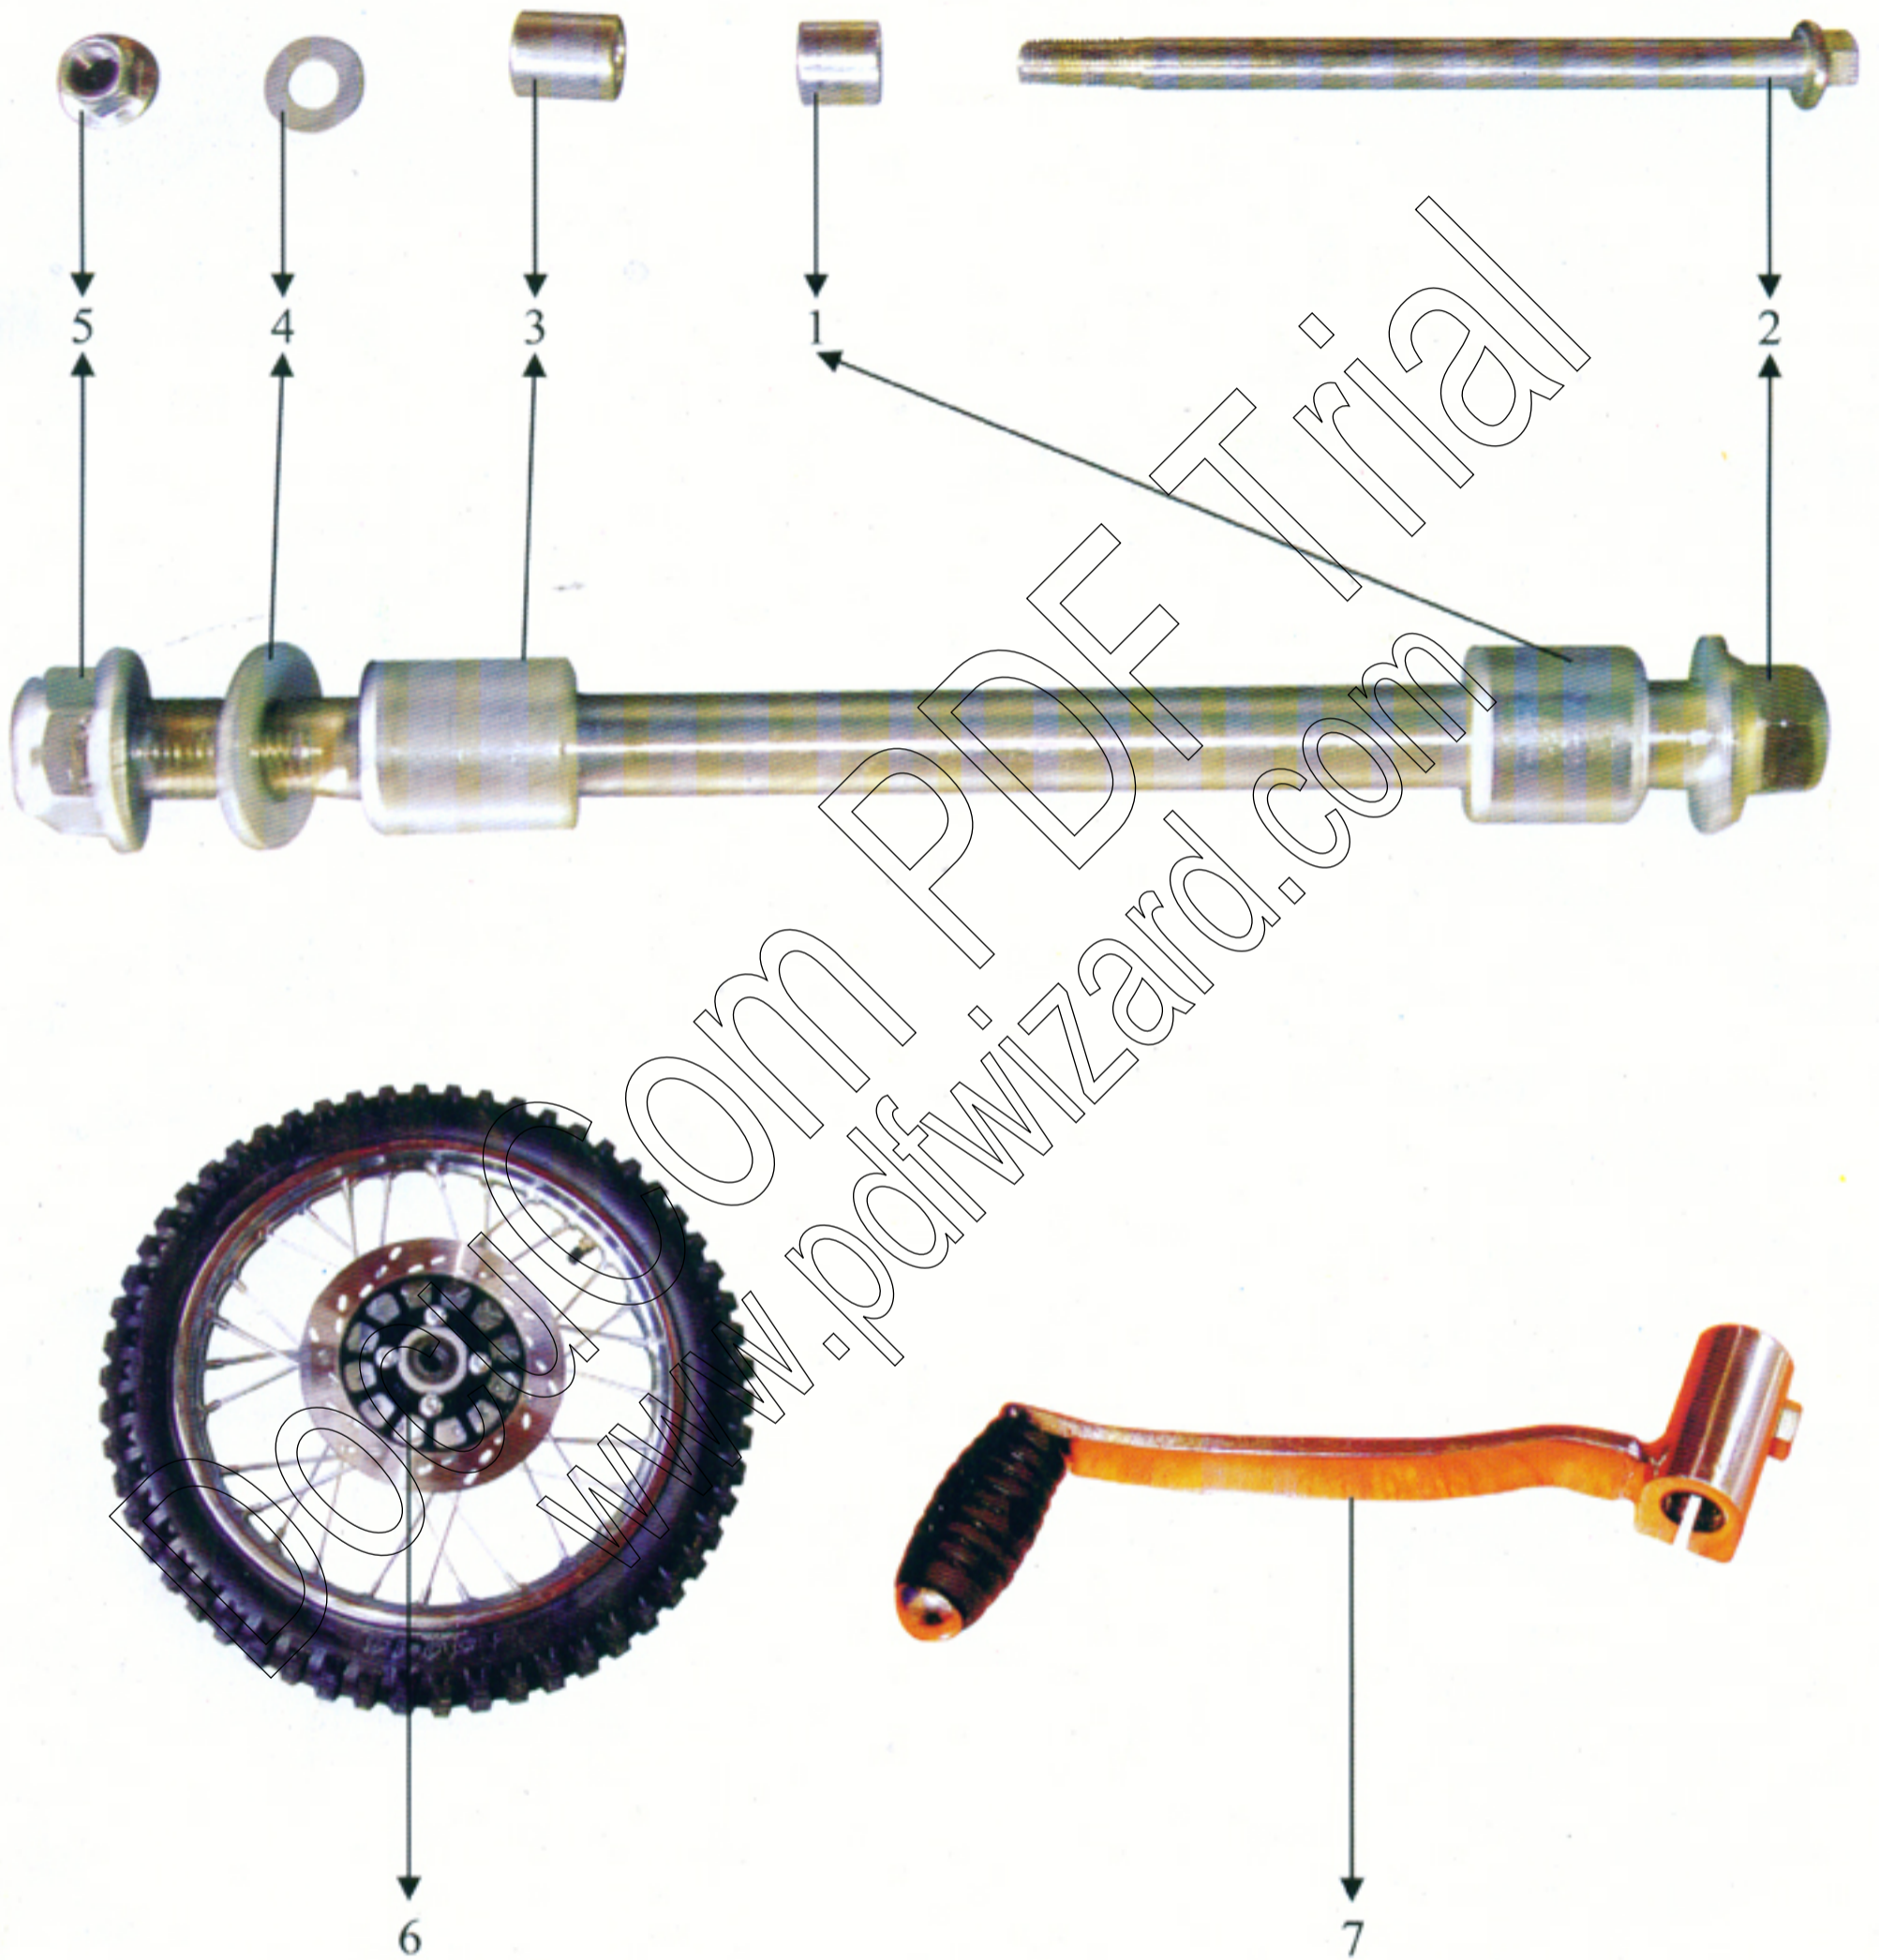

1. Right bush for front wheel 2. Front axle 3. Left bush for front wheel
4. Shim 5. Front axial cap nut 6. Front wheel 7. Shift lever

Step1, Draw off limiting rubber stopper from release the right disc brake handle, and then release the handle. (See the picture 1)



(Step 1)

Step2, Draw off limiting rubber stopper from the front wheel disc brake, meanwhile don't pull the front wheel right brake handle. (See the picture 2)



(Step 2)

Step3, Install the bush "1" and the bush "3" in the front wheel. (See the picture 3)



(Step 3)

Step4, after doing the above-mentioned steps, match the disc of brake and the brake pump and match the axial pore and pores of front fork, and then plug the axle "2" through. (See picture 4)



(Step 4)

Step5, After installing the axle, put the shim "1" around the axle, then put on the cap nut "5". (See the picture 5)



(Step 5)

Step6, Fasten the cap nut "5" with the 14#—17# wrench. (See the picture 6)



(Step 6)

Step7, Adjust the direction control lever to the groove of top bridge, fasten them with M6 x 35 hexagon socket head cap screw (see picture 7)



(Step 7)

Step8, Buckle the front plastic NO. Plate in the slot of top bridge back. (See the picture 8)



(Step 8)

Step9, Unscrew the M6 x 35 crew from the shift lever "7" and fasten it to the engine with 8#—10# wrench. (See the picture 9)



(Step 9)

Step10, Connect and fasten shock absorber and rear plain fork with 10# set pin, then plug 3# set in and bend it to prevent losing. (See the picture 10)



(Step 10)