


RTK-250W

Instruction for the installation



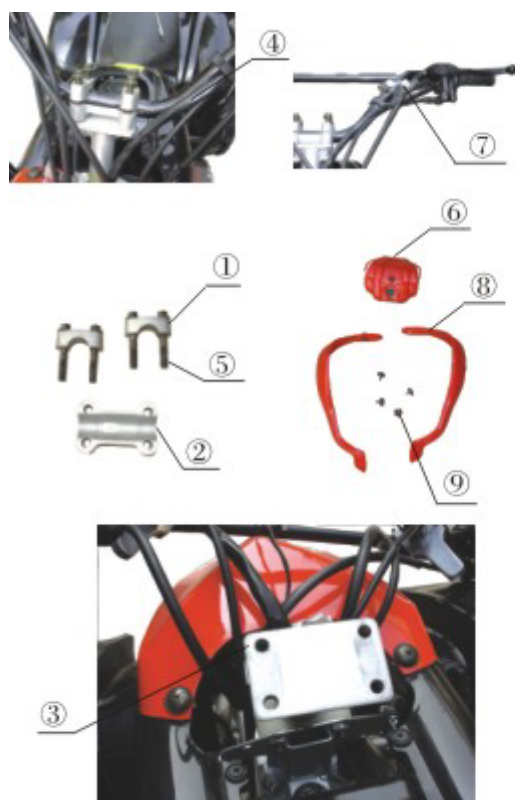

Step one: installation for handbar unit

1. Take out the ATV front carton, bulb removed from that support are no use, throw away.

2. Take out ① and ②, insert them on ③, then fix ④ and ⑤ by ⑥.

3. Then, put one light and ⑦ on ④, the other fix into ⑤ by ⑧, see ⑨.

4. Take down ⑩ and ⑪, there fix ⑫ on ⑬ and ⑭ by ⑮. (The step of assembling left and right side is the same.)

Attention:

1. Don't throw away the rubber marker of ⑨.

2. ⑫ must be fixed in the middle of ⑬.

NO	Name	Specification	Quantity	Remark
①	Handbar clip		2	In the standard hardware bag
②	Handbar clip seat		1	In the standard hardware bag
③	Steering stem		1	In the ATV
④	Handbar		1	In the ATV
⑤	Bolt	M8 × 55	4	In the standard hardware bag
⑥	Ornamental cover, handbar		1	In the carton
⑦	Plank, ornamental cover, handbar		2	On the handbar
⑧	Protecting cover, handbar		2	In the carton
⑨	Bolt	M6 × 16	2	On the handbar
		M6 × 20	2	On the handbar



Step two: installation for front wheels

1. Put ① care ② fixing hole, fix it by ③ and ④, then insert ⑤ into the hole of ②. Hold equal out to the style of both side, make it stable.

2. Take out ⑥ and ⑦ from the carton, connect them by ⑧, fix it by ⑨ and ⑩, then insert ⑪ into the hole of ⑥, hold equal out to the style of both side, make it stable.

3. The wheel's assembled direction is in accord with the ATV's, copying the style, besides, valves are outward, fix ⑫ on ⑬ and ⑭ by ⑮, see ⑯ and ⑰.

Attention:

1. Don't fix firm or not, don't use the ATV.

NO	Name	Specification	Quantity	Remark
①	Cross joint comp		2	In the ATV
②	Turing leve		2	In the ATV
③	Spring mat		2	In the ATV
④	Nut, castle		2	In the ATV
⑤	Pin, cotter	φ 2.2 × 25	2	In the standard hardware bag
⑥	Front wheel	19 × 7-8	2	In the carton
⑦	Nut	M8	8	In the ATV
⑧	Bush		2	In the standard hardware bag
⑨	Arrestor hub		2	In the carton
⑩	Arrestor		2	In the carton
⑪	Washer		2	In the ATV
⑫	Nut, castle		2	In the ATV
⑬	Pin, cotter	φ 3.2 × 30	2	In the standard hardware bag



Step three: installation for rear wheels

1. Take down (Xcom1), then fix (rear) by ②.

2. Take down (Xcom1), then fix (left) by ③.

Attention:

④ must be fixed, or not, don't use the ATV.


NO	Name	Specification	Quantity	Remark
①	Rear wheel	18 × 9.8-8	2	In the carton
②	Connecting plate rear wheel		2	In the ATV
③	Bolt	M10 × 25	8	In the ATV
④	Bush		2	In the standard hardware bag



Step four: installation of bumper

1. Take down (Xcom1), then fix (left) by ②.

NO	Name	Specification	Quantity	Remark
①	Frame		1	In the ATV
②	Bolt	M8 × 16	4	In the ATV
③	Bumper		1	In the carton

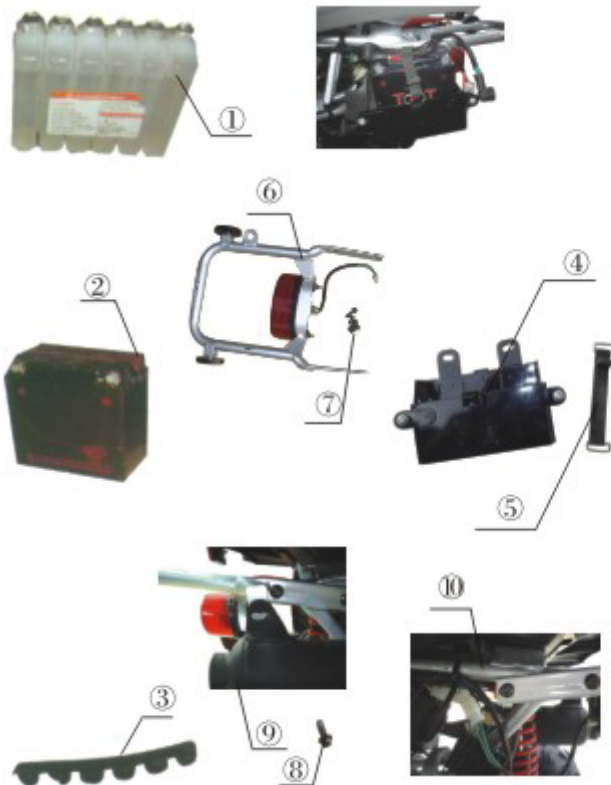

Step five :installation for battery and tail light stand

1. Take out ①from ④, put ①into ②, please refer to the installing instruction of ①.

2. Put ② into ④, replace it by ③ into ④.

3. Fix right side of ④ on ⑩, connect ④ with ⑧. Fix left side of ④ on ⑧, and the red cable should be connected with the positive lead, while green cable with negative lead when connecting.

4. Take down ⑨ from ⑧ by ⑨.

5. Connect the tail light with loading cable plug together.

序号	Name	Specification	Quantity	Remark
①	Battery electrolyte		1	In the carton
②	Battery	12N9-BS	1	In the carton
③	Plug		1	On the battery
④	Battery box		1	In the carton
⑤	Buttery band		1	On the battery box
⑥	Tail light stand		1	In the carton
⑦	Bolt	M8 × 20	4	In the ATV
⑧	Bolt	M8 × 16	1	In the ATV
⑨	Muffler		1	In the ATV
⑩	Frame		1	In the ATV