

Coyote110Assy(1)



Coyote110Assy(2)




Coyote110Assy(3)



**picture 3 - insert the bolt**

Coyote110Assy(4)

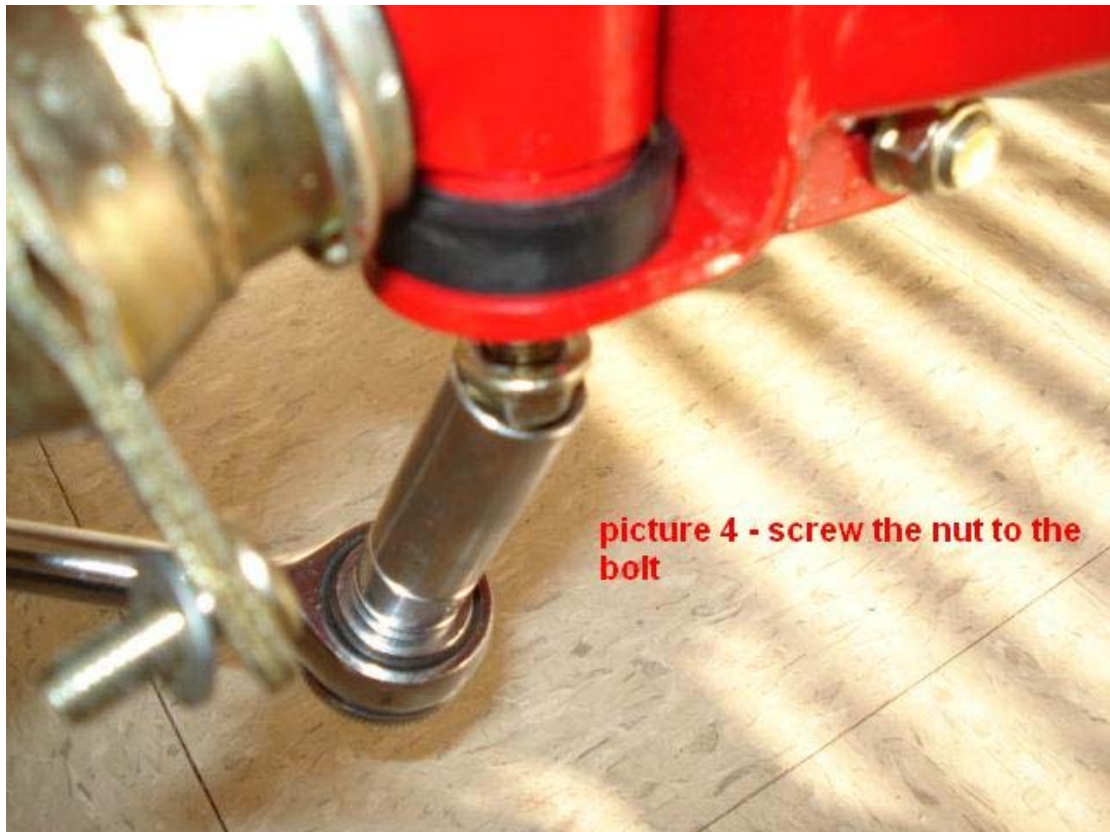

**picture 4 - screw the nut to the bolt**

Coyote110Assy(5)



Coyote110Assy(6)



Coyote110Assy(7)



Coyote110Assy(8)



Coyote110Assy(9)



Coyote110Assy(10)



Coyote110Assy(11)




Coyote110Assy(12)



Coyote110Assy(13)



Coyote110Assy(14)

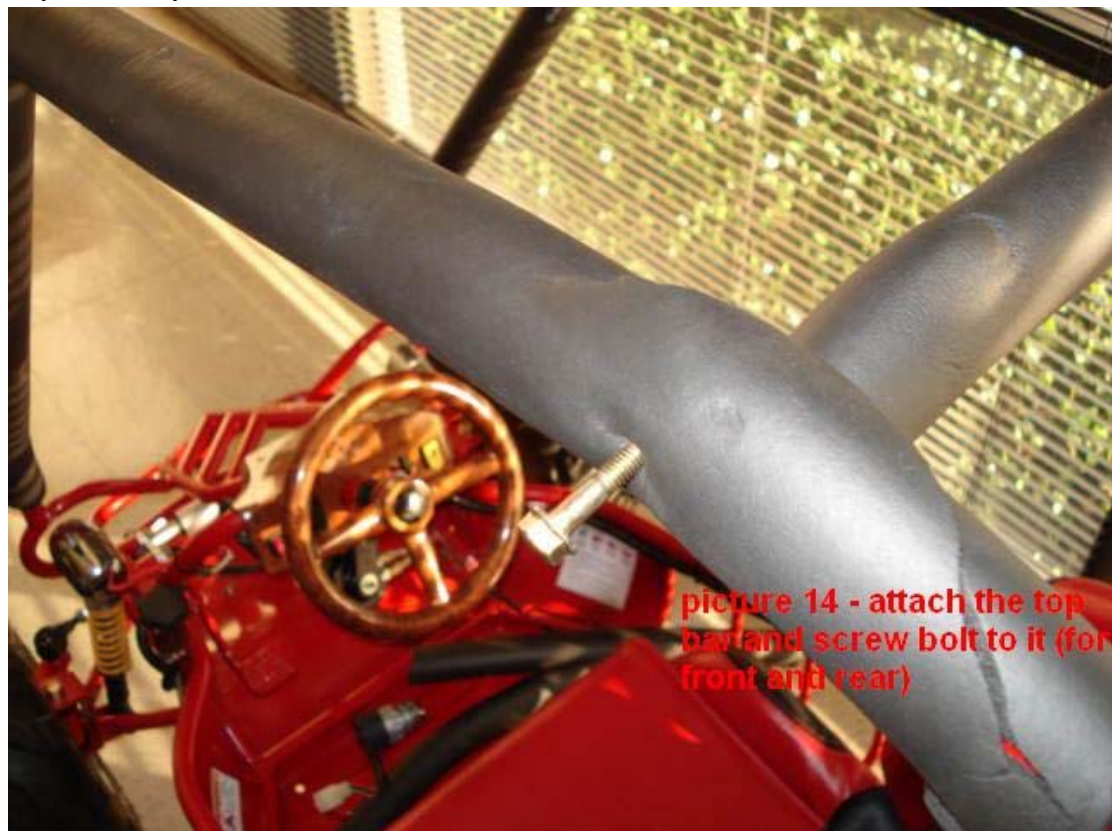

Coyote110Assy(15)

