

(open the package, take out the tool's bag, dismantle the packing-screw) .



图 1



图 2



图 3



图 4



图 5



图 6



图 7



图 8

Picture 1: dismantle the screw on vehicle frame, fix screw on front shock.

2.: aim at goods shelves and plastic cover- hole, and twist the screw

3.fix the front safeguard frame


4.aim at the back of vehicle frame, and fix the light frame, twist screw , join the line and handlebar

5.fix the back-goods shelves

6.make aluminum lump aim at direction post and tighten

7.fix the thin tire.on front—axle, and twist screw

8.fix the thick tire on back—axle, and twist screw.

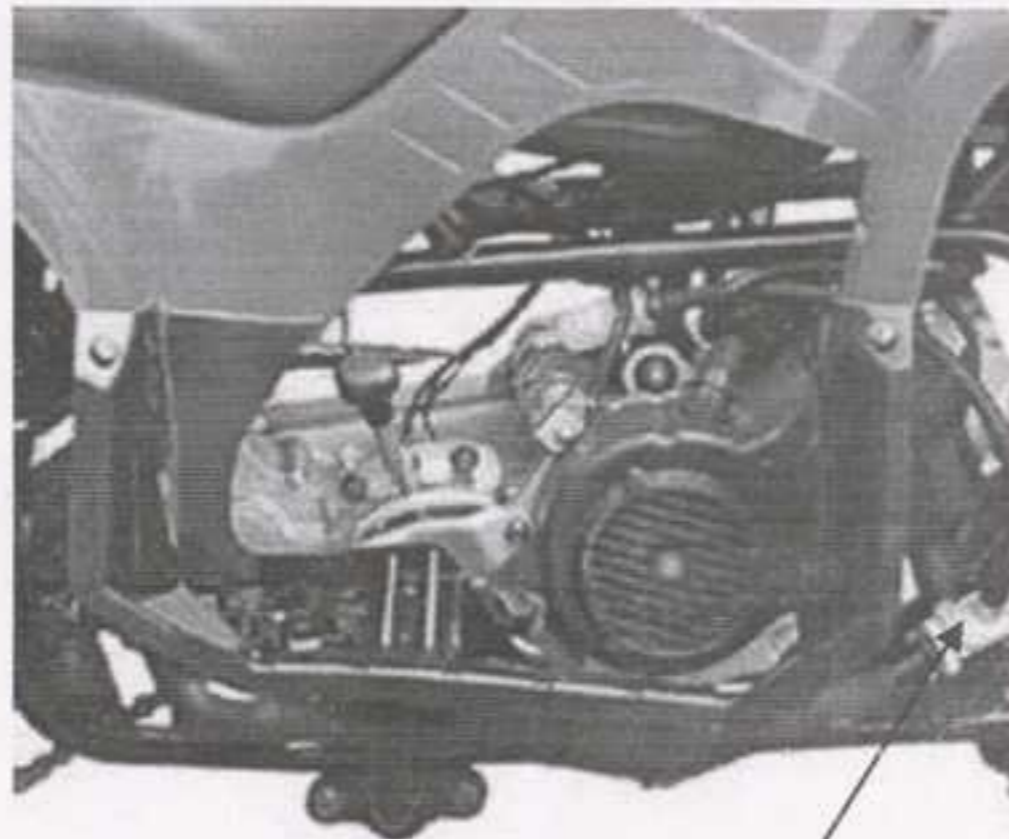

Exhaust system have been

added accelerant and second-time air valve, which improved the exhaust pollutant ,and now it can reach standard Euro.