

Step one: installation for handbar unit

1. Take out the ATV from carton, bolts removed from that support are no use, throw away.

2. Take out ① and ②, set ② on ③, then fix ① on ④, tighten ①, ② and ③ by ⑤, ⑥ on ⑤ by ①.

3. Please put one light into ⑥'s "N", the other light into ⑥'s "R". ⑥ on ⑩ by ⑫.


4. Take down ⑦ and ④'s ⑨, then fix ⑧ on ⑦ and ④ by ⑧. (The step of assembling left and right side is the same)

Attention:

1. Don't throw away the rubber washer of ⑨.

2. ① must be fixed in the middle of ④.

NO	Name	Specification	Quantity	Remark
①	Handbar clip		2	In the standard hardware bag
②	Handbar clip seat		1	In the standard hardware bag
③	Steering stem		1	In the ATV
④	Handbar		1	In the ATV
⑤	Bolt	M8 × 55	4	In the standard hardware bag
⑥	Ornamental cover, handbar		1	In the carton
⑦	Plank, ornamental cover, handbar		2	On the handbar
⑧	Protecting cover, handbar		2	In the carton
⑨	Bolt	M6 × 16	2	On the handbar
		M6 × 20	2	On the handbar
⑩	Standweld		1	In the ATV
⑪	Standweld		1	In the ATV
⑫	Bolt	M6 × 12	3	In the standard hardware bag

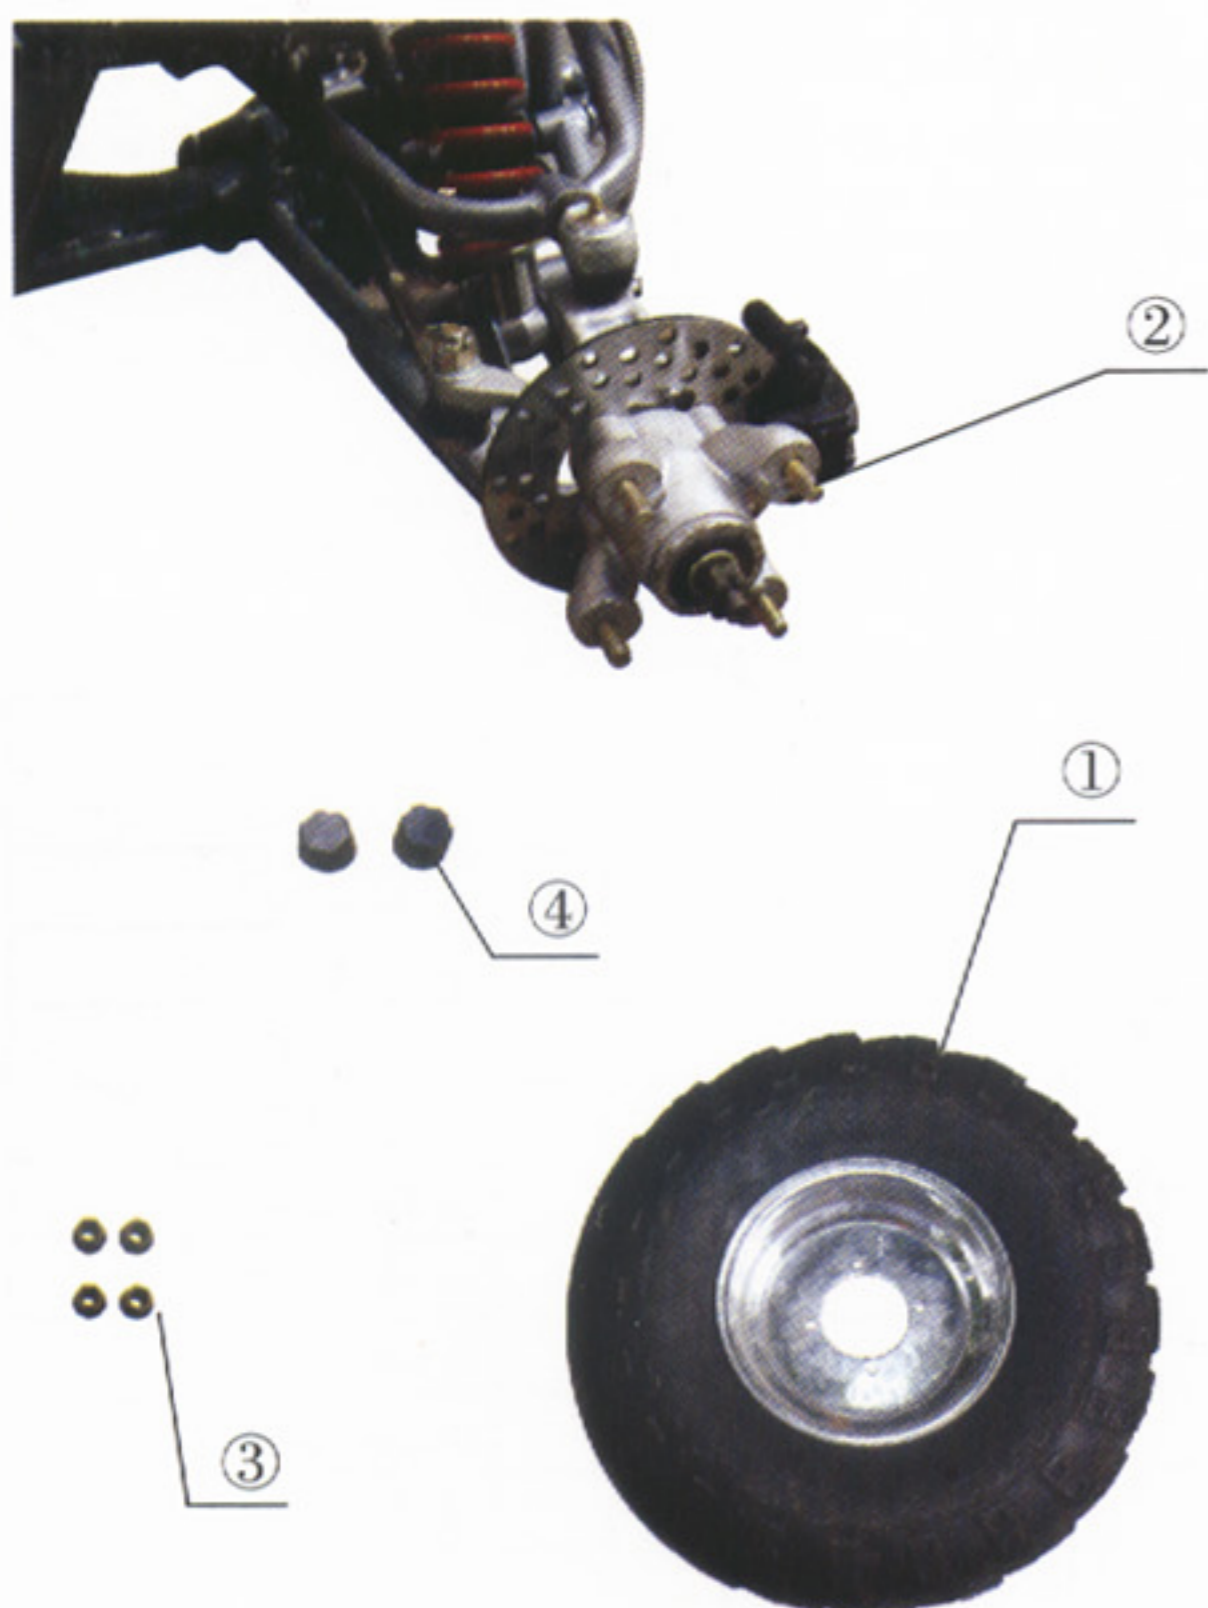

Step two: installation for front wheels

1. Take down ② from ①, then fix ② on ① by ③.

2. Take down ④ from ①.

Attention:

③ must be firm, if not, don't use the ATV.

NO	Name	Specification	Quantity	Remark
①	Front wheel	23 × 7-10	2	In the carton
②	Connecting plate front wheel		2	In the ATV
③	Nut	M10	8	In the standard hardware bag
④	Bush		2	In the standard hardware bag


Step three: installation for rear wheels

1. Take down ② from ①, then fix ② on ① by ③.

2. Take down ④ from ①.

Attention:

③ must be firm, if not, don't use the ATV.

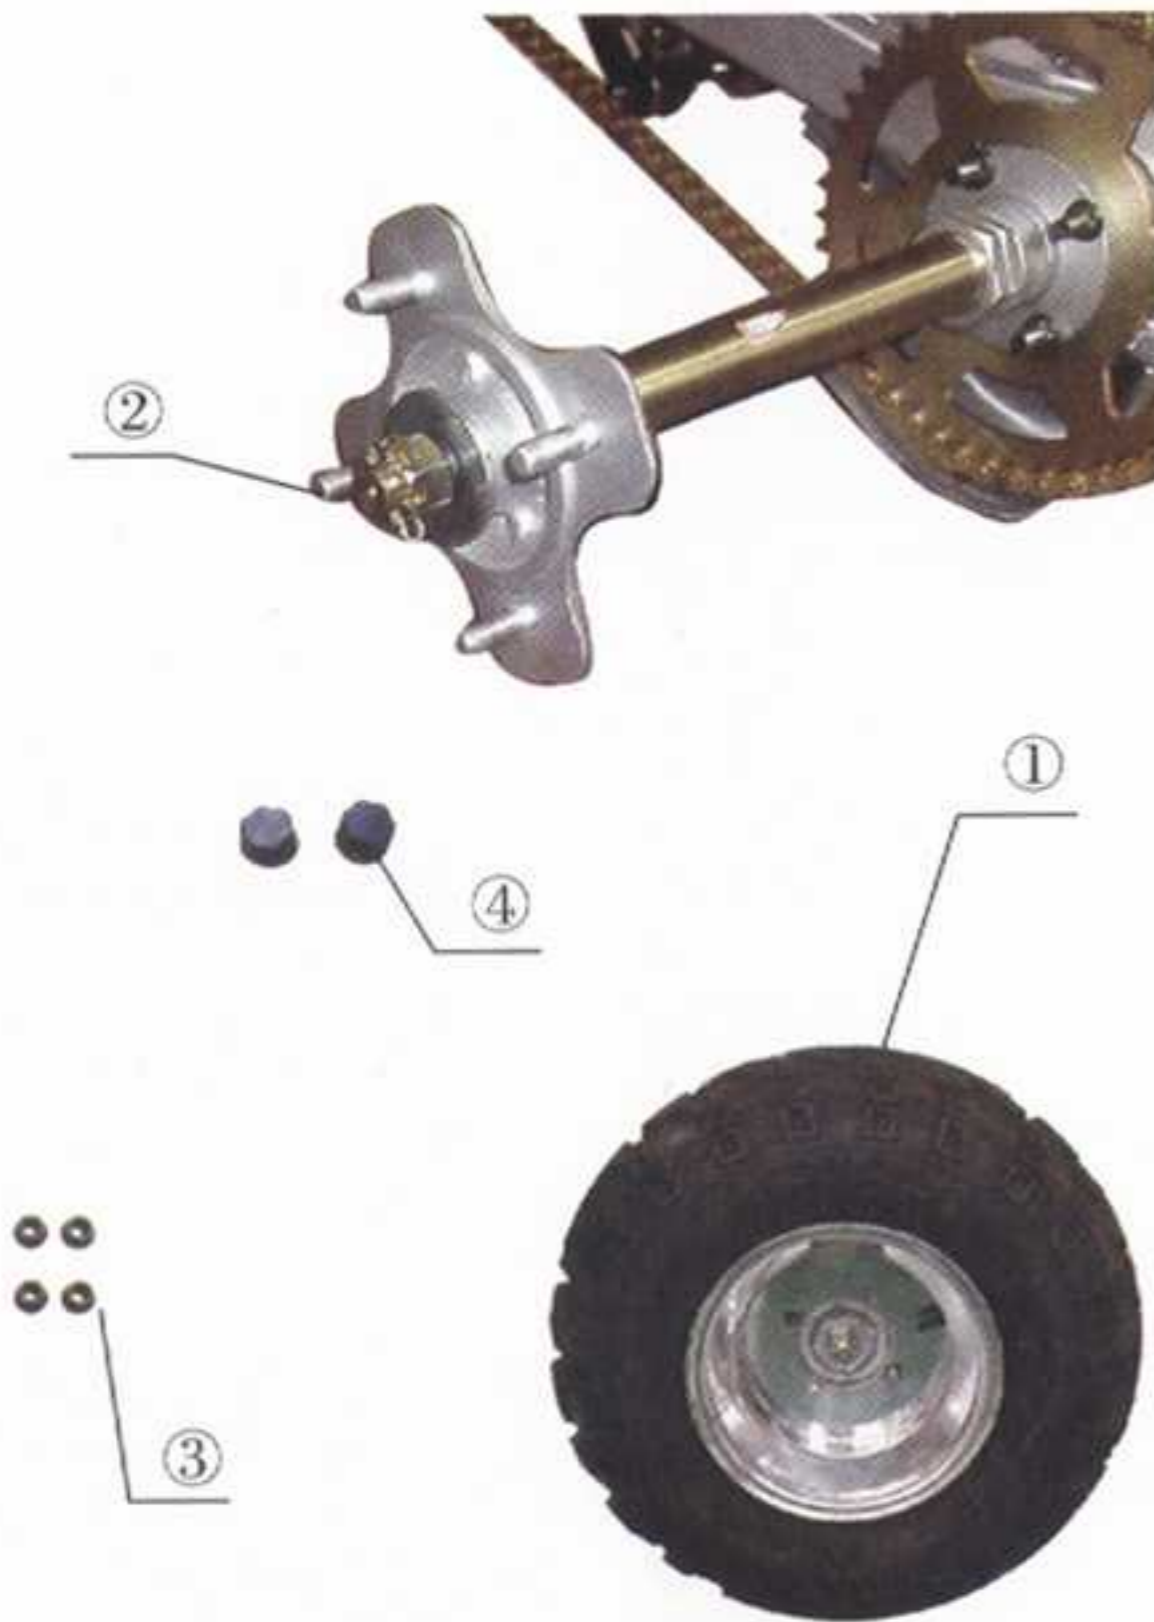


NO	Name	Specification	Quantity	Remark
①	Rear wheel	22 × 10-10	2	In the carton
②	Connecting plate rear wheel		2	In the ATV
③	Nut	M10	8	In the standard hardware bag
④	Bush		2	In the standard hardware bag


Step four: installation of bumper, front absorber and front cover

1. Take down ② from ①, fix ③ on ① by ②.

2. Take out ④ and take down ⑤, six ④ on ⑥, ⑦ by ⑤.

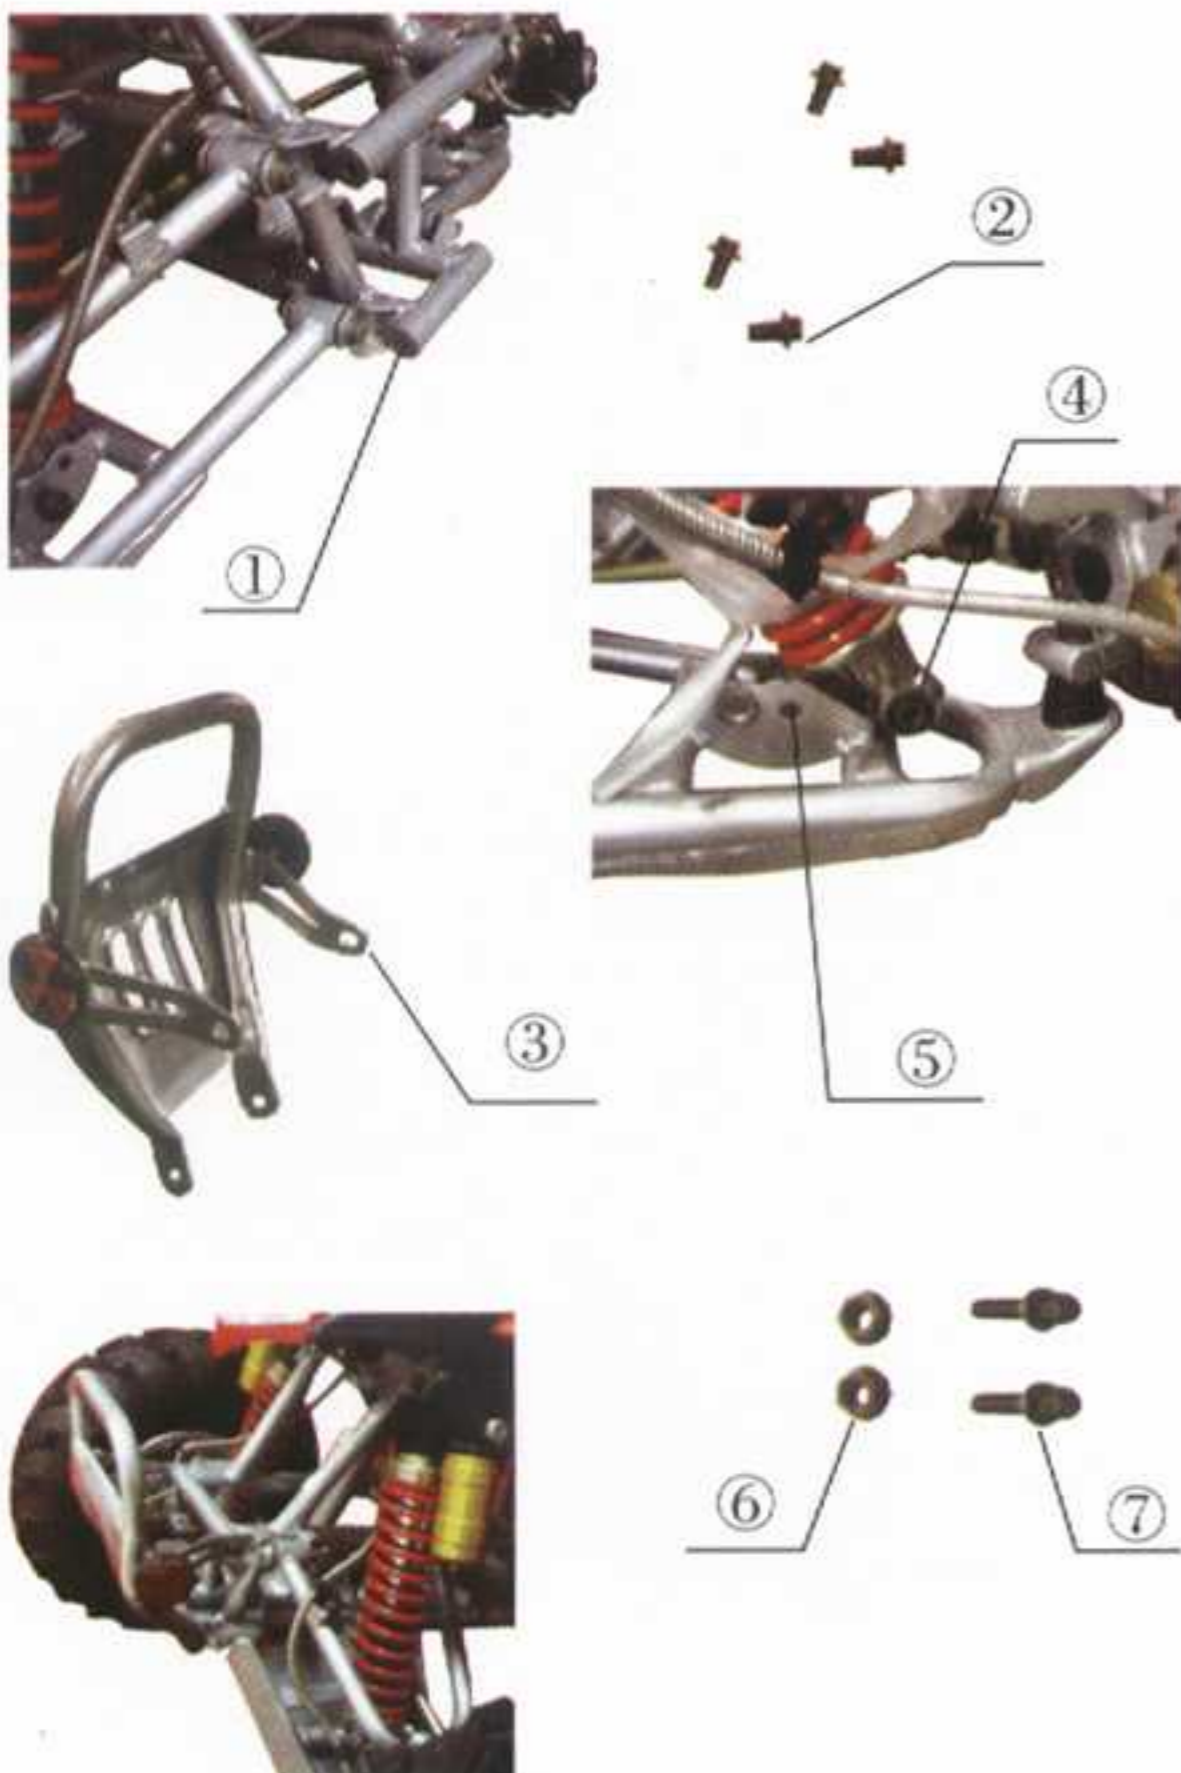

NO	Name	Specification	Quantity	Remark
①	Frame		1	In the ATV
②	Bolt	M8 × 16	4	In the ATV
③	Bumper		1	In the carton
④	Shocker absorber		2	In the ATV
⑤	Frame		1	In the ATV
⑥	Nut	M10	2	In the Ballonet
⑦	Bolt	M10 × 50	2	In the Ballonet

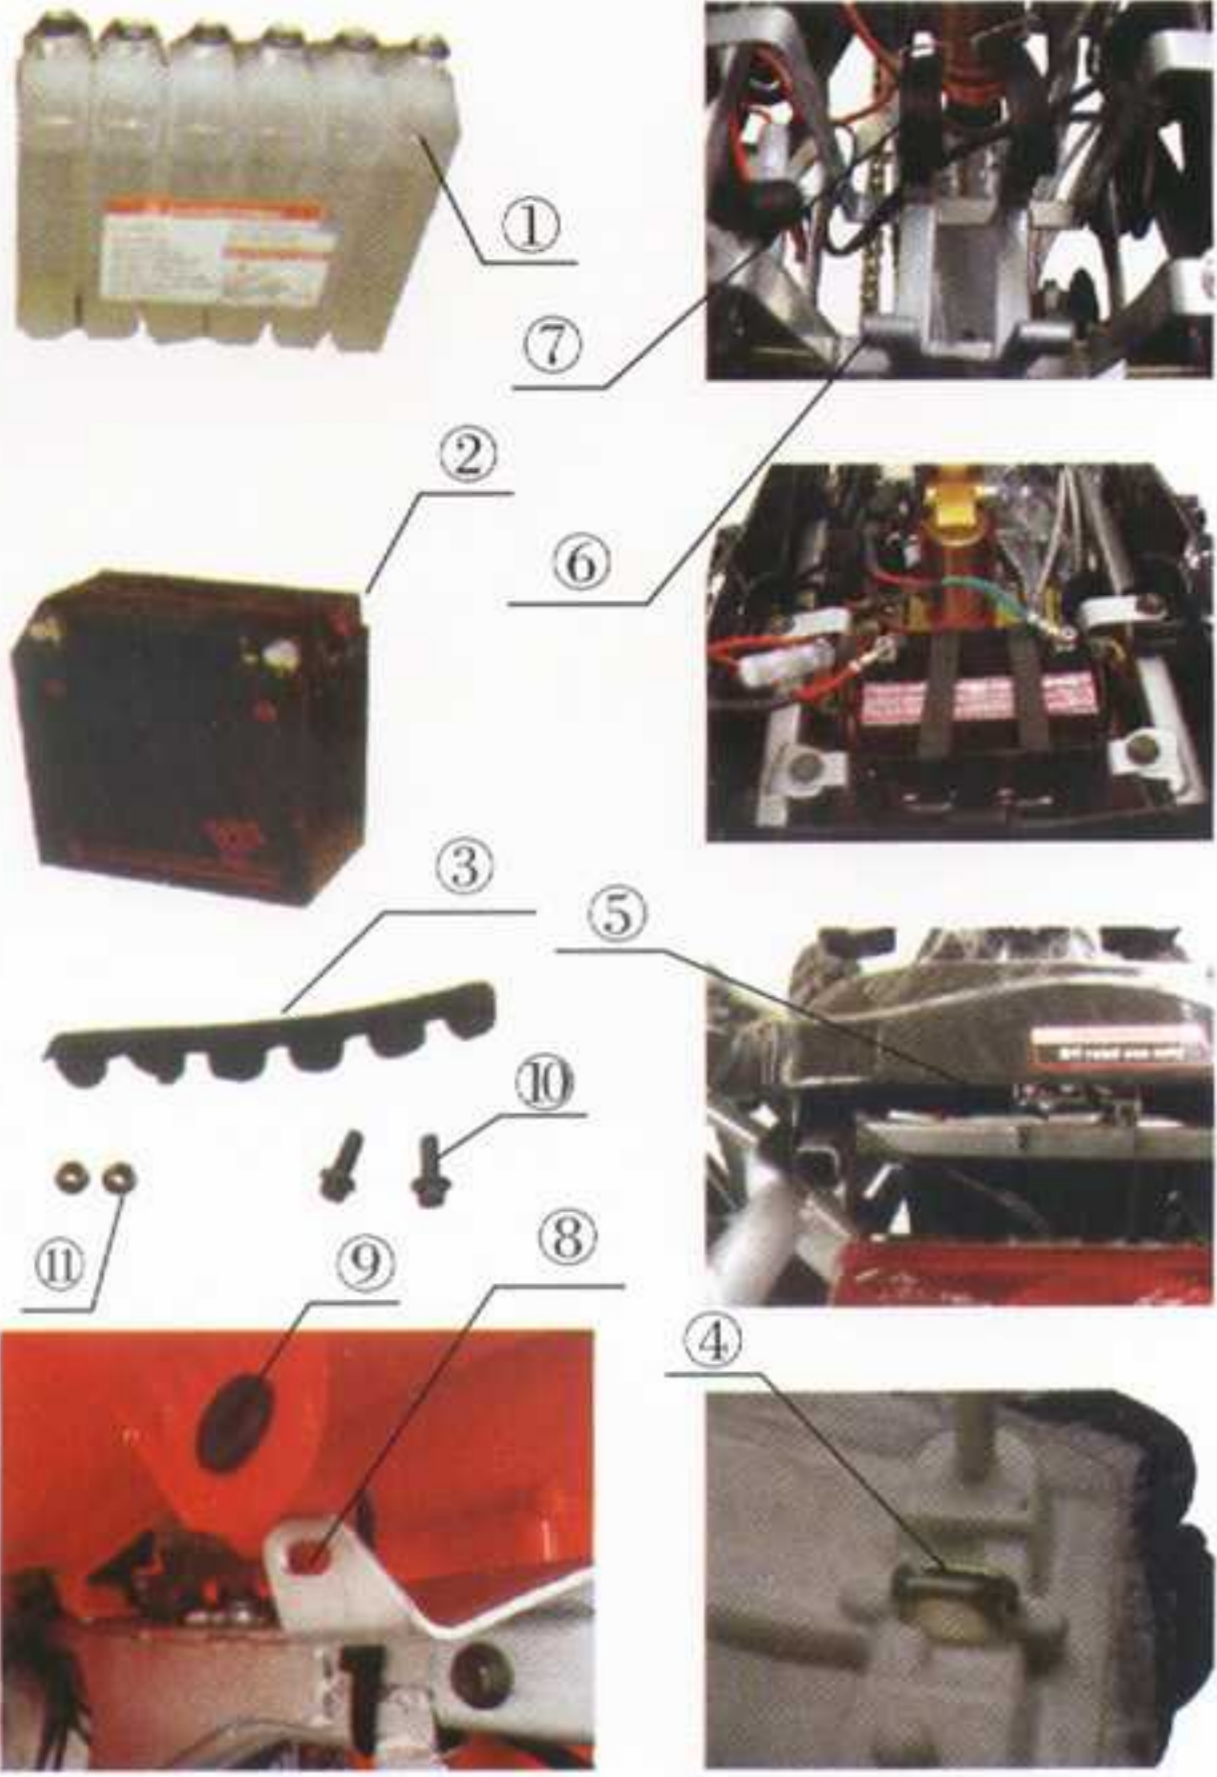

Step five: installation for battery and seat

1. Take out ①, ②, take down ③ on ②, put ① into ②.
2. Put ③ into ② back. (please refer to the installation instruction of ①)
3. Put back ② into the ATV, which includes positive and negative lead, the battery cable. Includes red cable and green cable, please be noted that the red cable should be connected with the positive lead, while green cable with negative lead when connecting.
4. Take up ④ by hands, clasp ⑤ by L hand. press down ④ forwarding to fasten, ② on ⑥ by ⑦.
5. ⑧ On ⑨ by ⑩, ⑪.

Attention:

Don't spatter ① on ②, if so, please wipe it up, then install.

NO	Name	Specification	Quantity	Remark
①	Battery electrolyte		1	In the carton
②	Battery		1	In the ATV
③	Plug		1	On the battery
④	Seat		1	In the ATV
⑤	Seat lock		1	On the seat
⑥	Battery box		1	In the ATV
⑦	Buttery band		1	In the ATV
⑧	Standweld		1	In the ATV
⑨	Standweld		1	In the rear fender comp
⑩	Bolt	M6 × 30	2	In the ATV
⑪	Nut	M6	2	In the ATV