


Instruction for the installation



Seventh: Battery Installation

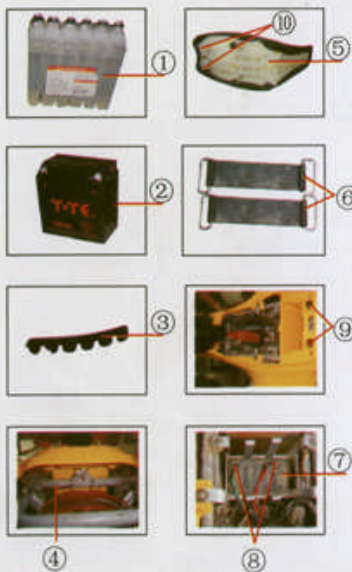

Number	Name	Quantity	Specification	Remarks
①	Battery Electrolyte	1		In the bag
②	Battery	1	12N9-BS	In the bag
③	Rubber plug	1		In the bag
④	Seat lock	1		On the ATV
⑤	Seat	1		On the ATV
⑥	Bundling Band	2		In the bag
⑦	Battery box	1		On the ATV
⑧	Battery cable	2		On the ATV
⑨	Seat fixing hole	2		On the ATV
⑩	Seat fixing pin	2		On ⑤

Battery Installation steps:

1. Referring to battery electrolyte manual, pouring ① into ②, then sealing it with ③;
2. Uphrust ④, then pulling out ⑤;
3. Putting ② in the right position of ⑦;
4. Connecting ⑧ with ②;
5. Then fixing ② on ⑦ with ⑥;
6. While you pressing ⑤ to ④, you should put ⑩ into ⑨.

Attention:

The battery includes positive and negative lead, the battery cable includes red cable and green cable. Please be noted that the red cable should be connected with the positive lead, while green cable with negative lead when connecting.

Tool: Clubs screwdriver or spanner(M10)




Forth:Footrest Protection Nut Installation

Number	Name	Quantity	Specification	Remarks
①	Footrest protection nut	1		On the ATV
②	Cap	4	M6×16	On ④
③	Nut	4	M6	On ④
④	Bracket of footrest Production nut	1		On the ATV
⑤	Nut	1	M8	On ④

Footrest Protection Nut Installation Steps:

- 1、 Backouting ② and ③ and ⑤ from ④;
 - 2、 Using ②、 ③ and ⑤ to fix ① on ④.
- (Remark:Right and Left at the meantime)

Tool:Clubs screwdriver and Spanner(M13)

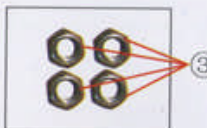


Sixth:Rear Wheel Installation

Number	Name	Quantity	Specification	Remarks
①	Fixing stage,rear wheel	1		On the ATV
②	Dust proof cover	1		In the bag
③	Nut	4	M12	On ①
④	Rear wheel	1		On the ATV
⑤	Valve	1		On ④

Rear Wheel Installation Steps:

- 1、 Putting ③ off ①;
 - 2、 Using ③ to fix ④ on ①;
 - 3、 Buttoning ② on ①.
- (Remark:Right and Left at the meantime,⑤ facing outside)

Tool:Spanner(M19)

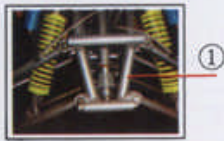


Third:Front Bumper Installation

Number	Name	Quantity	Specification	Remarks
①	Frame	1		On the ATV
②	Front bumper	1		On the ATV
③	Bolt	4	M8×20	On the ATV




Front Bumper Installation steps:

- 1、 Taking out ③ from ①;
- 2、 Using ③ to fix ② on ①.

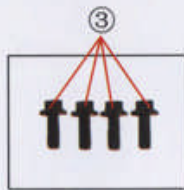

Tool:Spanner(M10)

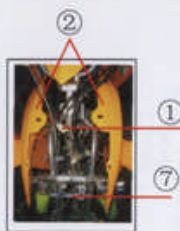


Frist:Headlight Installation

Number	Name	Quantity	Specification	Remarks
①	Joint of headlight	1		On the ATV
②	Front cover fixing hole	2		On the ATV
③	Headlight	1		On the ATV
④	Joint of Headlight	1		On the ATV
⑤	Cap	4	M6×20	In the bag
⑥	Nut	4	M6	In the bag
⑦	Headlight stand	1		On the ATV
⑧	Headlight fixing hole	2		On ③


Headlight Installation Steps:

- 1、 Making ① and ④ join together;
- 2、 buttoning ③ on ②,using ⑤ and ⑥ to fasten ③ in ② fastening ⑧ on ⑦.

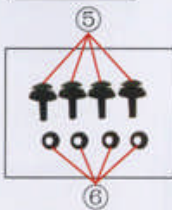

Tool:Clubs screwdriver.

Second: Handlebar Installation

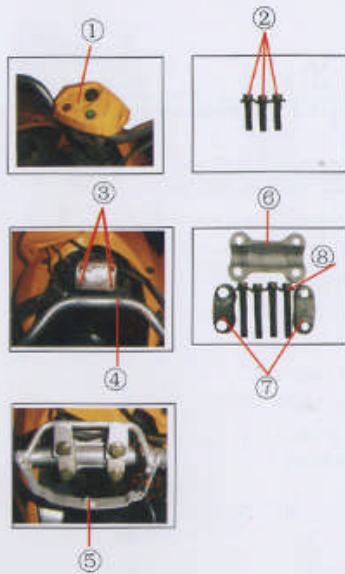


Number	Name	Quantity	Specification	Remarks
①	Cover of ignition switch	1		In the bag
②	Bolt	3	M6×16	On ⑤
③	Fixing hole of steering	4		On the ATV
④	Handlebar	1		On the ATV
⑤	Bracket of ignition switch	1		In the bag
⑥	Clip seat, Handlebar	1		In the bag
⑦	Clip, Handlebar	2		In the bag
⑧	Bolt	4	M8×45	In the bag

Handlebar Installation Steps:

- 1、 Putting ⑥ on ③, then putting ④ on ⑥, lock ④ with ⑦, putting ⑤ on ⑦, using ⑧ to fix ⑤、⑦、④、⑧ on ③;
- 2、 Using ② to fix ① on ⑤.

Tool: Clubs screwdriver and spanner(M10)

Fifth: Front Wheel Installation

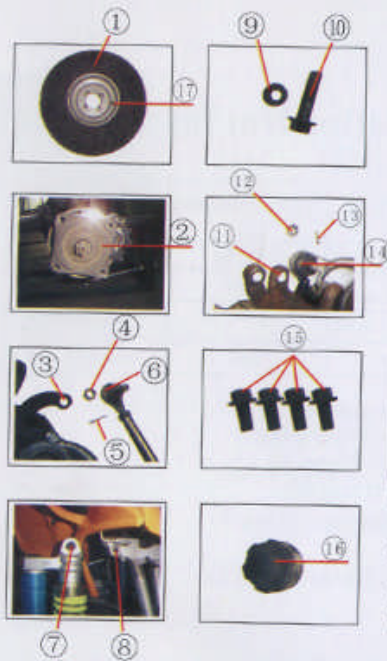

Number	Name	Quantity	Specification	Remarks
①	Front wheel	1		On the ATV
②	Fixing stage, front wheel	1		On the ATV
③	Head, goat	1		On the ATV
④	Nut	1	M10	On ②
⑤	Pin	1	Small	In the bag
⑥	Tie rod	1		On the ATV
⑦	Front shocker absorber	1		On the ATV
⑧	Fixing stage of front shocker absorber	1		On the ATV
⑨	Nut	1	M10	On ②
⑩	Bolt	1	M10×45	On ②
⑪	Turning knuckle	1		On the ATV
⑫	Nut	1	M12	On ②
⑬	Pin	1	Larger	In the bag
⑭	Turning ball	1		On the ATV
⑮	Bolt	4	M10×20	On ②
⑯	Dust proof cover	1		In the bag
⑰	Valve	1		On ①

Front wheel Installation Steps:

- 1、 Backouting ③ from ②, then putting ① on ①, and ③ is fixed tightly with ⑤, then ripping ① into ③;
- 2、 Backouting ④ from ⑥, putting ③ on ⑥, and fixing tightly with ①, then ripping ⑤ into ⑥;
- 3、 Backouting ⑨ and ⑩ from ⑧, using ⑨ and ⑩ to fix ⑦ in ⑧;
- 4、 Backouting ③ from ②, using ⑮ to fix ① on ②;
- 5、 Capping ⑰ on ②.

(Remark: Right and left at the meantime, ⑦ facing outside)

Tool: Spanner (M13、 M17、 M19)