


RTK-200A

Instruction for the installation



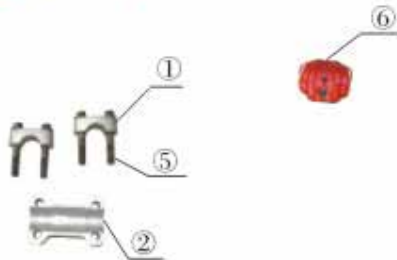

Step one: installation for handbar unit

1. Take out the ATV from carton, built removed from that support and up to the 1st step.


2. Take out ① and ②, as ③, use ④, then by ⑤ and ⑥, figure ①, ②, and ③ by ④.

3. Then set, put into right side of the ATV, the other right side ⑤ and ⑥, ① by ④, see ④.

Attention:

① must be fixed in the middle of ④.

NO	Name	Specification	Quantity	Remark
①	Handbar clip		2	In the standard hardware bag
②	Handbar clip seat		1	In the standard hardware bag
③	Steering stem		1	In the ATV
④	Handbar		1	In the ATV
⑤	Bolt	M8 × 55	4	In the standard hardware bag
⑥	Ornamental cover, handbar		1	In the carton

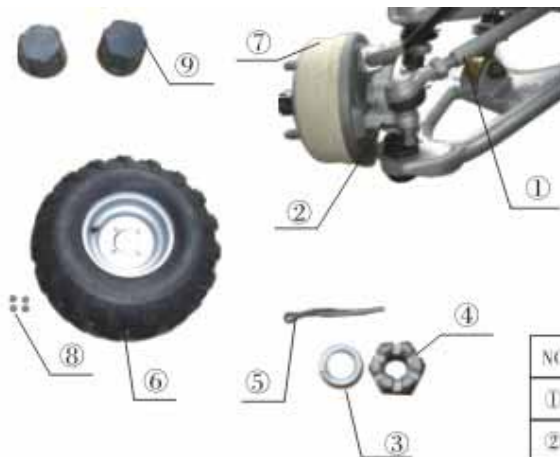

Step two: installation for front wheels

1. Put ① into ② fixing hole, fix it by ③ and ④, then insert ⑤ into the hole of ⑥. Add spring end to the axle of butterfly, make it stable.

2. The wheel's arrow head direction is according with the ATV's steering direction. Inside valves are upward, fix it on ⑦ by ⑧, see ⑧ and ⑨.

Attention:

⑧ must be fixed in the middle of the ATV.

NO	Name	Specification	Quantity	Remark
①	Turing lever		2	In the ATV
②	Cross joint comp		2	In the ATV
③	Spring mat		2	In the ATV
④	Nut, castle		2	In the ATV
⑤	Pin, cotter	φ2.2 × 25	2	In the standard hardware bag
⑥	Front wheel	19 × 7-8	2	In the carton
⑦	Hub, front wheel		2	In the ATV
⑧	Nut	M8	8	In the ATV
⑨	Bush		2	In the standard hardware bag



Step three: installation for rear wheels


1. Take down (2) from (1), then fix (2) on (1) by (3).

2. Take down (4) from (1), then fix (4) by (3).

Attention:

(3) must be firm, or not, don't use the ATV.

NO	Name	Specification	Quantity	Remark
①	Rear wheel	18 × 9.8-8	2	In the carton
②	Connecting plate rear wheel		2	In the ATV
③	Bolt	M10 × 25	8	In the ATV
④	Bush		2	In the standard hardware bag

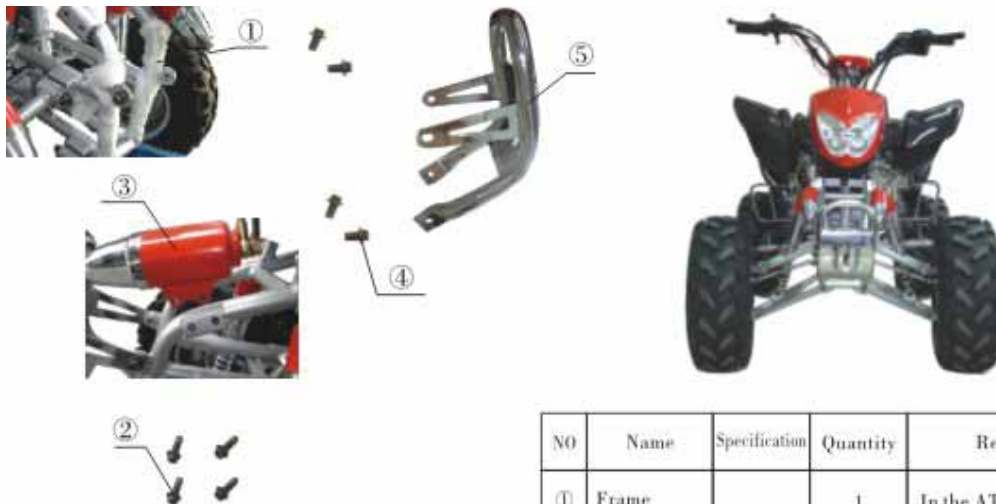


Step four: installation of bumper and ballonet

1. Take down (2) from (1), then fix (2) on (1) by (3).

2. Take down (4) from (1), then fix (4) by (3).

NO	Name	Specification	Quantity	Remark
①	Frame		1	In the ATV
②	Bolt	M6 × 25	4	In the ATV
③	Ballonet		2	In the ATV
④	Bolt	M8 × 16	4	In the ATV
⑤	Bumper		1	In the carton

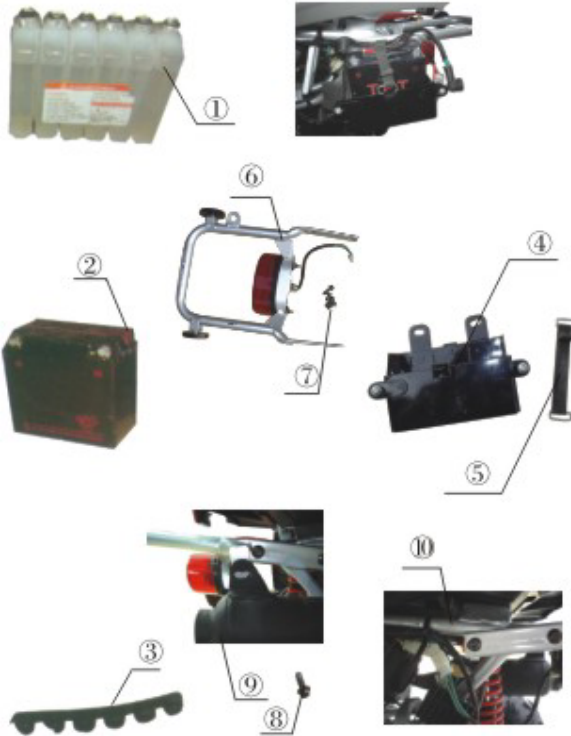

Step five :installation for battery and tail light stand

1. Take out the battery electrolyte and please refer to the installation instructions of it.
2. Put the battery electrolyte into it.
3. The right end of the terminal should be connected with the positive bank, while the left end with negative lead wire connecting.
4. Make sure the connection is correct.
5. Connect the tail light with bonding cable plug together.

序号	Name	Specification	Quantity	Remark
①	Battery electrolyte		1	In the carton
②	Battery	12N9-BS	1	In the carton
③	Plug		1	On the battery
④	Battery box		1	In the carton
⑤	Buttery band		1	On the battery box
⑥	Tail light stand		1	In the carton
⑦	Bolt	M8 × 20	4	In the ATV
⑧	Bolt	M8 × 16	1	In the ATV
⑨	Muffler		1	In the ATV
⑩	Frame		1	In the ATV