
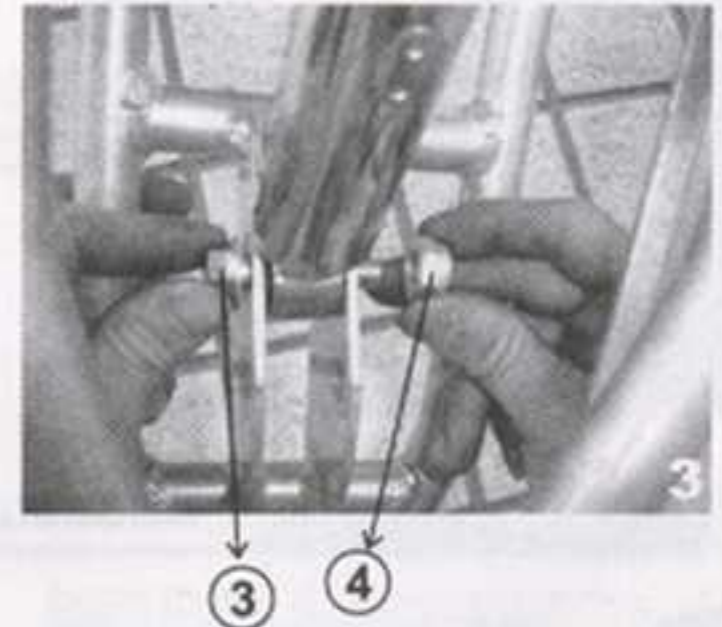
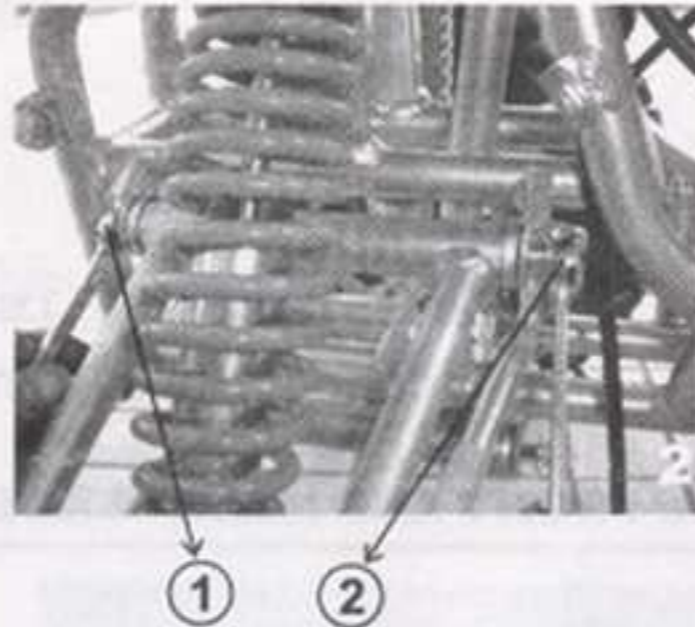


Assemble Manual

Step.1

ASSEMBLE THE FRONT SWING ARM

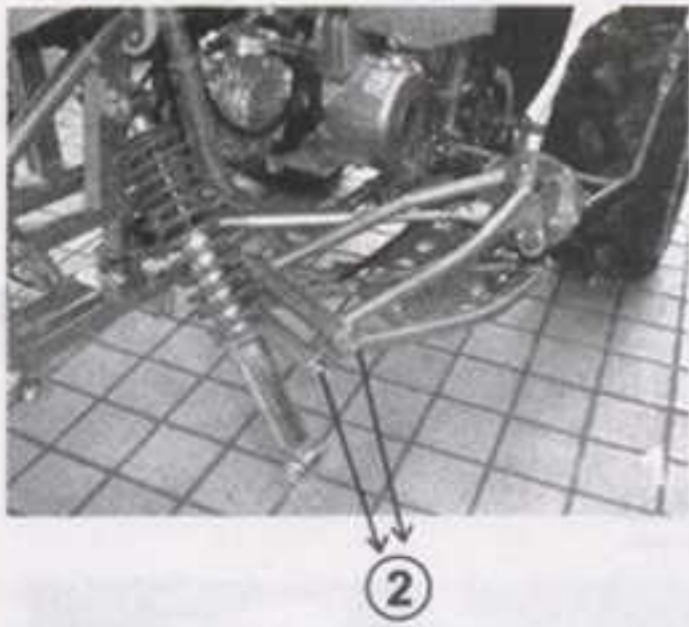







NO	PART NAME	QTY	NOTE
①	BOLT	2	ATTACHED
②	NUT	2	ATTACHED. THE SAME TO THE RIGHT
③	BOLT	1	ATTACHED. THE SAME TO THE RIGHT
④	NUT	1	IN CARTON

Instruction for the installation:

1. Fix the swing arm with ①&②
2. Fix the front shock with ③&④

Step.2

ASSEMBLE THE WHEELS

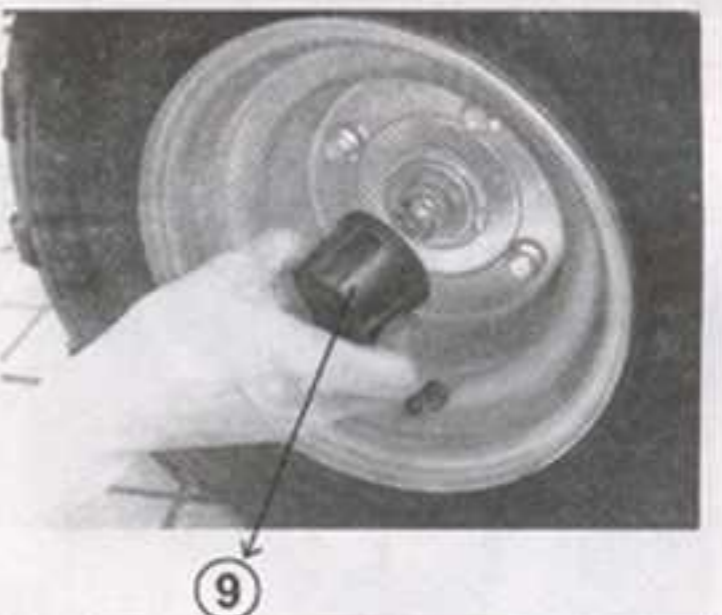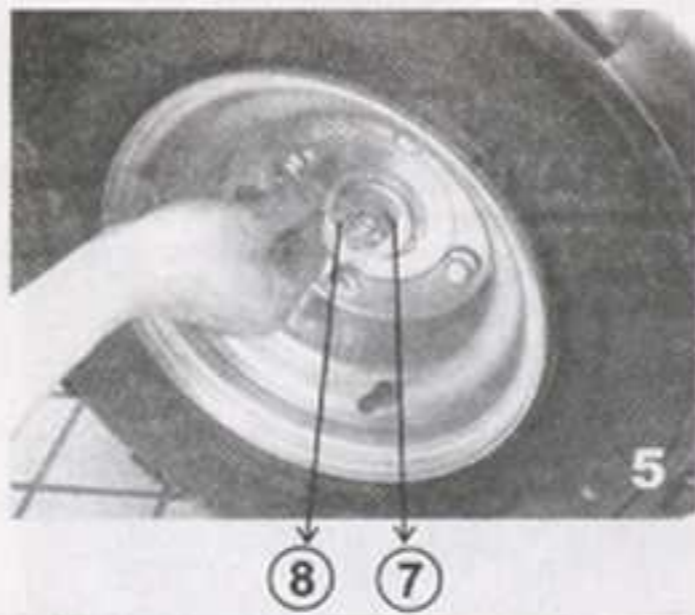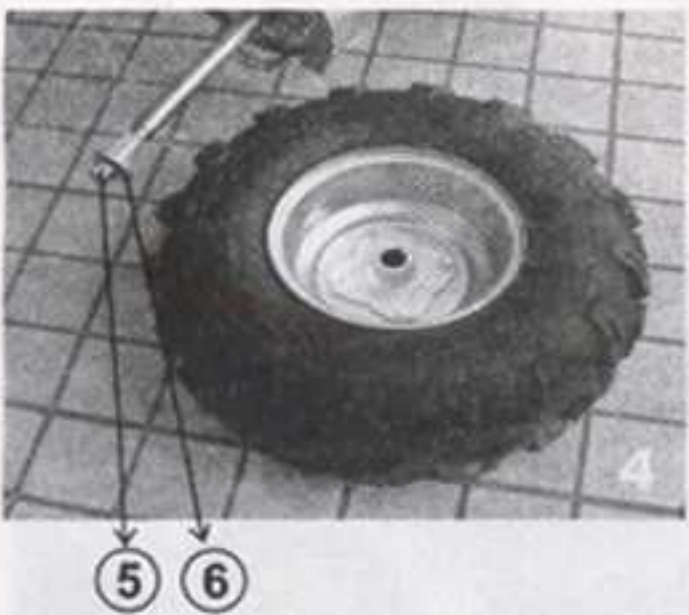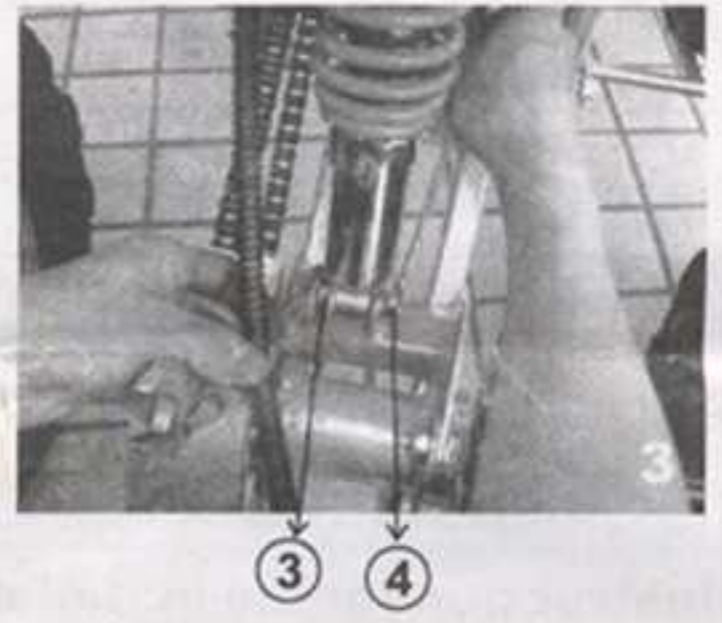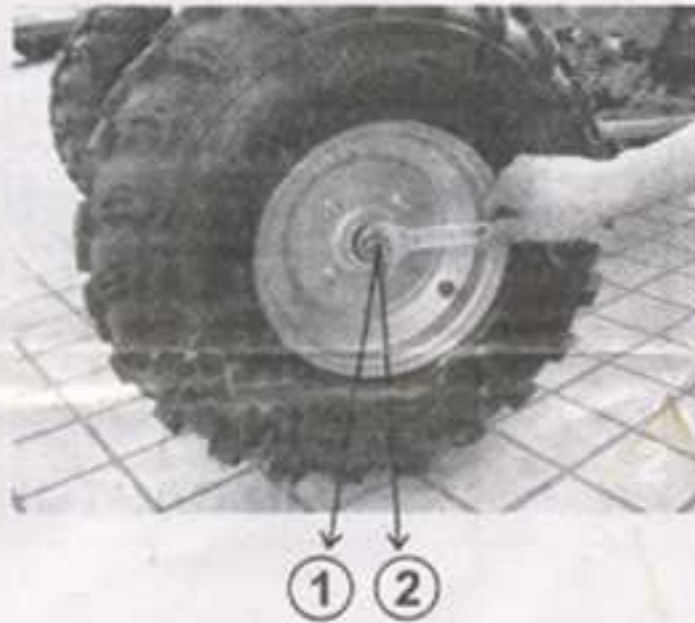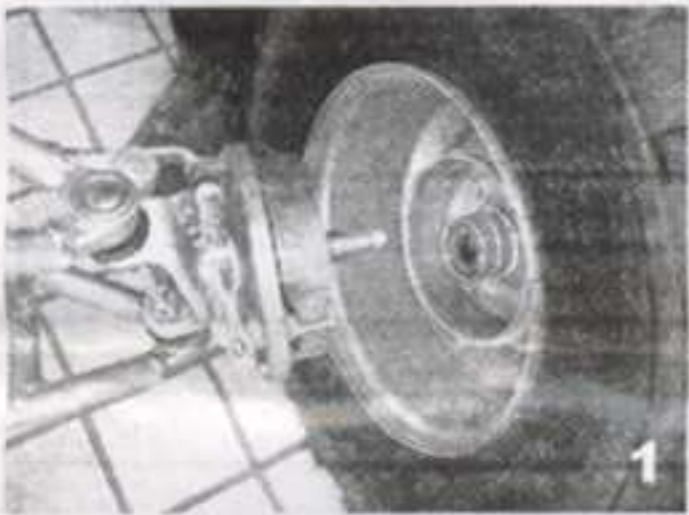

NO	PART NAME	QTY	NOTE
①	NUT	1	ATTACHED. THE SAME TO THE RIGHT
②	DUSTPROOF COVER HOLDER	1	ATTACHED. THE SAME TO THE RIGHT
③	BOLT	1	ATTACHED.
④	NUT	1	ATTACHED.
⑤	NUT	1	ATTACHED. THE SAME TO THE RIGHT
⑥	WASHER	1	ATTACHED. THE SAME TO THE RIGHT
⑦	DUSTPROOF COVER HOLDER	1	ATTACHED. THE SAME TO THE RIGHT
⑧	PIN	1	ATTACHED. THE SAME TO THE RIGHT
⑨	RUBBER DUSTPROOF COVER	2	IN CARTON

Instruction for the installation:

1. Put the front wheel on, fix it with ①&②
3. Put the rear wheel on, fix it with ⑤.⑥.⑦. &⑧

2. Fix the rear shock absorber with ③&④
4. Put ⑨ on ⑦.

Step.3

ASSEMBLE BATTERY






Attention

1. Please notice the ① sign of Positive lead and Negative lead.
2. To connect the red line to Positive lead and v.v .

Step.4

ASSEMBLE THE FRONT AND REAR FENDERBOARD

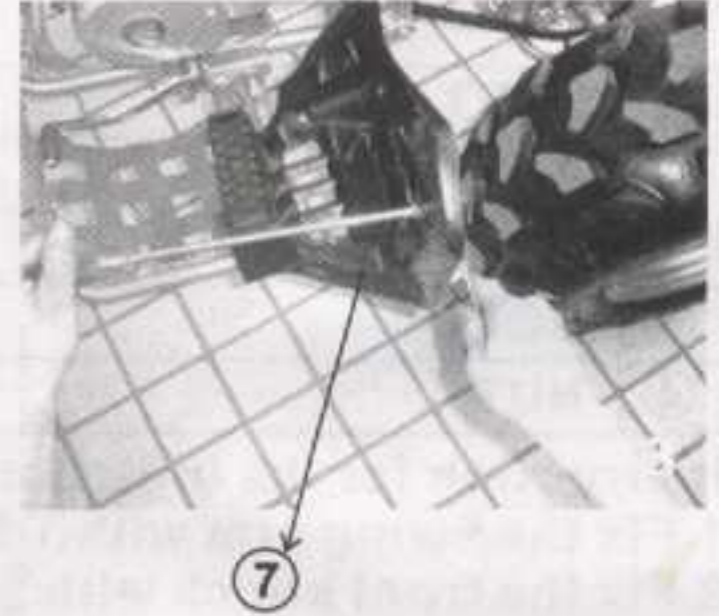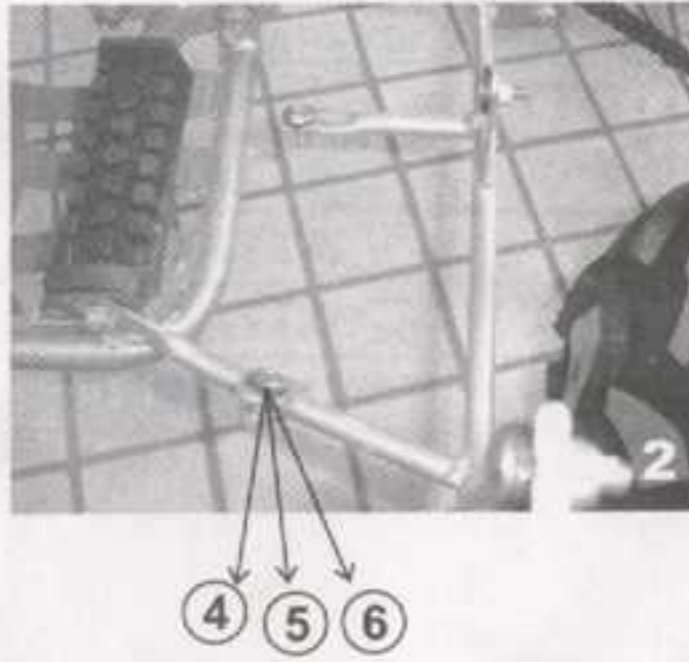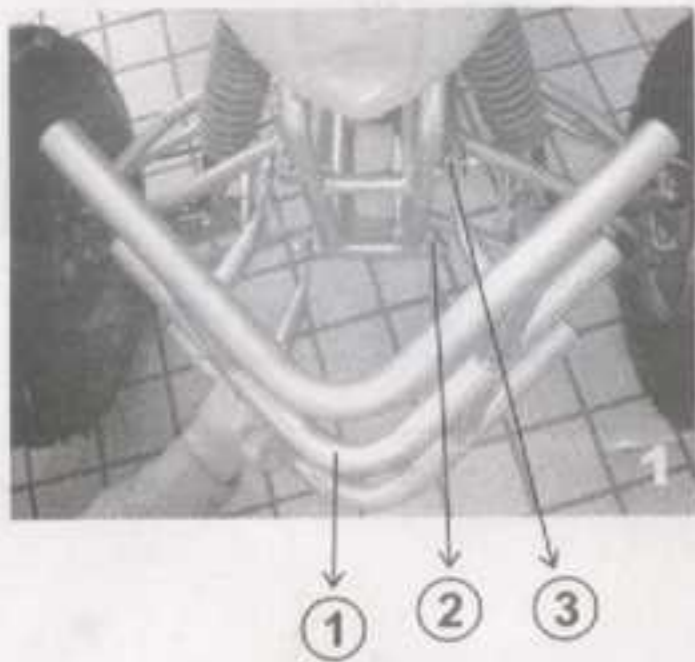


NO	PART NAME	QTY	NOTE
①	BUMPER	1	IN CARTON
②	BOLT	2	ATTACHED
③	BOLT	2	ATTACHED
④	NUT	4	IN CARTON
⑤	RUBBER WASHER	4	IN CARTON
⑥	SCREW	4	IN CARTON
⑦	FENDERBOARD	1	IN CARTON

Instruction for the installation:

1. Fix ① with ② & ③
2. Fix ⑦ with ④, ⑤ & ⑥

Step.5

ASSEMBLE THE HANDLE BAR

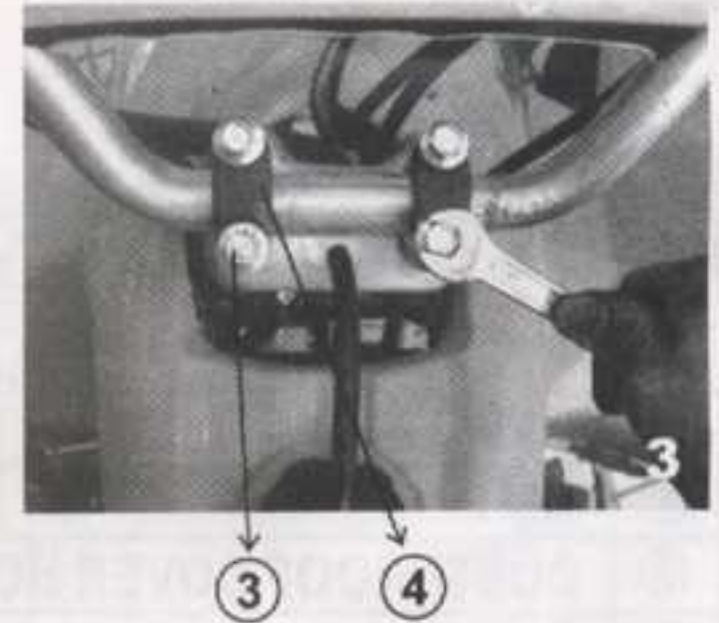

NO	PART NAME	QTY	NOTE
①	HANDLE BAR	1	IN CARTON
②	BRACKED	2	ATTACHED.
③	BOLT	4	ATTACHED.
④	BRACKED	2	ATTACHED.

Instruction for the installation:

1. Every item is dismantled.
2. Place ① handle bar on ②.
3. Fix ① & ② with ④ & ③.