

### INSTALLATION OF BATTERY (STEP 1)

S/N	DESCRIPTION	QUANTITY	SPECIFICATION	REMARK
①	Sealed strip	1		In battery box
②	Electrolyte	1		In battery box
③	Battery	1		In battery box
④	Wire,earth	1	Black	On motorcycle
⑤	Footrest carpet	1		On motorcycle
⑥	Bolt	2	M6X12	In battery box
⑦	Gasket	2	φ 6	In battery box
⑧	Washer	2	M6	In battery box
⑨	Body	1		
⑩	Wire,motor	1	Red	On motorcycle
⑪	Wire,power	1	Red	On motorcycle
⑫	Battery cover	1		On motorcycle
⑬	Bolt	2	ST4.8X16	On motorcycle


#### INSTALL STEP:

1. Fill ② into ③ refer to the instruction of battery, close down the battery with ①.
2. Take down ⑤ from ⑨, take down ⑫ from ⑨ by loose ⑬.
3. Connect ⑩ and ⑪ on the anode of ③ with ⑥, ⑦ and ⑧, connect ④ on the cathode of ③ With ⑥, ⑦ and ⑧.

ATTENTION: ⑦ must be put above on the anode and cathode, ⑧ must put inside the anode and cathode.

4. Put ③ into ⑨'s slot 5; Replac ⑫ with ⑬ ; 6, Replace ⑤.

You should wait for about 30 minutes after fill the electrolyte, then the battery can be put into use.

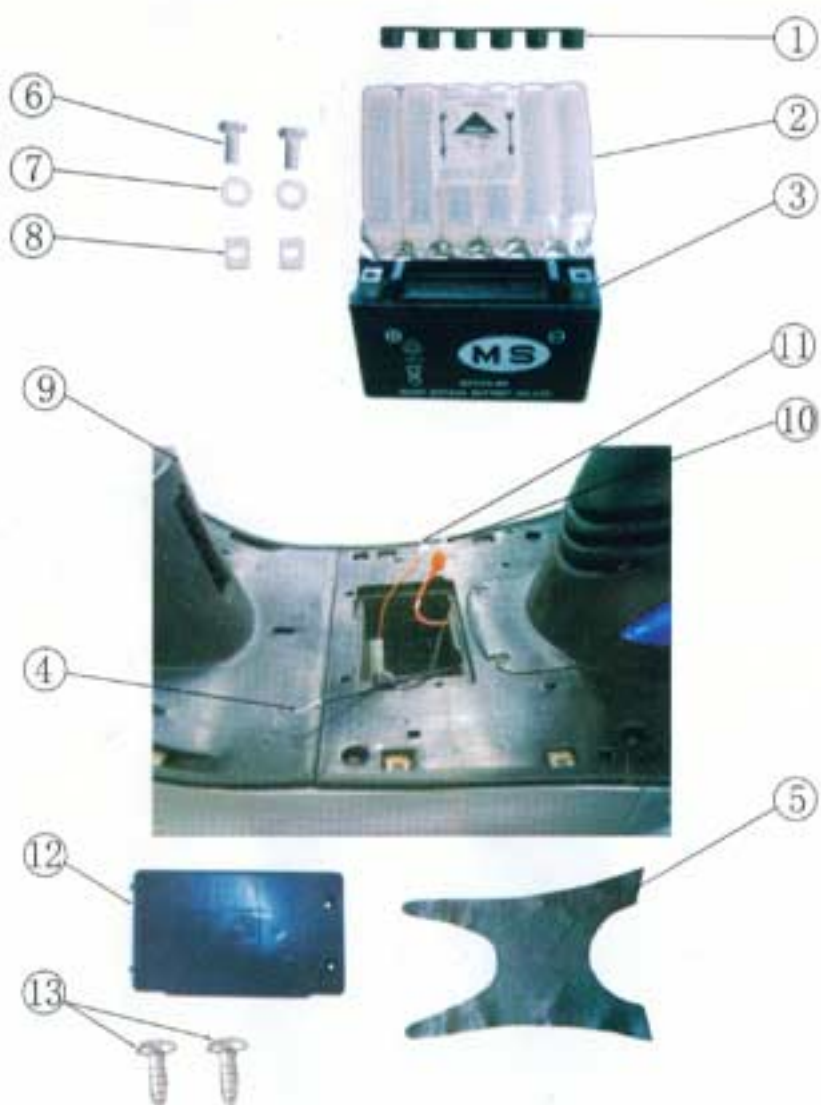

### INSTALLATION OF REAR BOX (STEP 2)

S/N	DESCRIPTION	QUANTITY	SPECIFICATION	REMARK
①	Bolt	4	M6X20	In ③
②	Gasket	4	φ 6	In ③
③	Rear box	1		On motorcycle
④	Fixing hole	4		In ③
⑤	Bolt	4	M6X45	In ③
⑥	Soleplate	1		In ③
⑦	Fixing hole	4		On ⑥
⑧	Washer	4	φ 6	In ③
⑨	Washer	4	φ 6	In ③
⑩	Screw	4	M6	In ③
⑪	Holder	2	166mm	In ③
⑫	Sponge cushion	1		In ③
⑬	RR.frame	1		On motorcycle
⑭	Motocycle	1		
⑮	Bolt	2	M6X30	On motorcycle
⑯	Bolt	1	M6X16	On motorcycle
⑰	Illustration			


#### INSTALL STEP:

1. Take off ⑮ and ⑯ from ⑭, then, fix ⑬ at the back of ⑭ with ⑮ and ⑯.
2. Put ⑥ on ⑬, put ⑪ under ⑬, and fix ⑥, ⑬, ⑪ together with ⑤, ⑧, ⑨ and ⑩. make sure ⑧, ⑨ and ⑩ under ⑪ orderly.

ATTENTION: ⑤ should penetrate ⑥, ⑬, ⑪ from the first and third slot of ⑬, referring ⑰.

3. Put ② on ④, fix ③ on ⑥ by ①, ②, ④ and ⑦.
4. put ⑫ into ③.



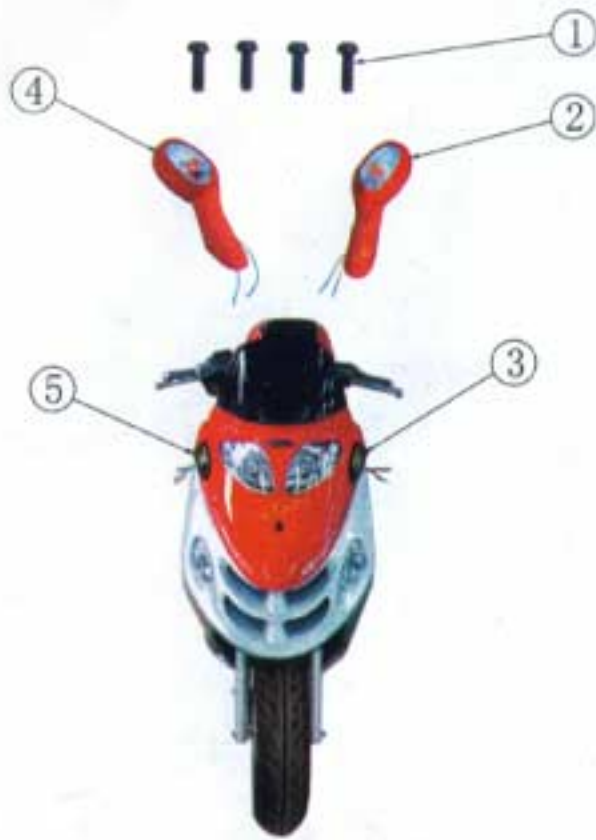

#### INSTALLATION OF REAR VIEW MIRROR(STEP 3 )

S/N	Description	Quantity	Specification	Remark
①	Bolt	4	ST4.8X16	In sundries box
②	L.RR.view mirrior	1		In sundries box
③	Location,L.RR.view mirrior			On vehicle
④	R.RR.view mirrior	1		In sundries box
⑤	Location.R.RR.view mirrior			On vehicle

#### INSTALL STEP:

Make sure the turning light switch on OFF position before install.

- 1,Connect ②'s wire with ③'s wire(the same color together).
- 2, Connect ④'s wire with ⑤'s wire(the same color together).
- 3,Check the turning light bright or not when turn on the switch of turning light.
- 4, Fix ② on ③ with ①. fix ④ on ⑤ with ①.



#### INSTALLATION OF L.HANDLE BAR (STEP 4)

S/N	Description	Quantity	Specification	Remark
①	L , handle bar	1		In sundries box
②	Steering handle	1		On motocycle

#### INSTALL STEP:

- 1,Install ① on ②.