


INSTALLATION OF BATTERY (STEP 1)

S/N	DESCRIPTION	QUANTITY	SPECIFICATION	REMARK
①	Sealed strip	1		In battery box
②	Electrolyte	1		In battery box
③	Battery	1		In battery box
④	Sundries-box	1		On motorcycle
⑤	Battery Cover	1		On motorcycle
⑥	Bolt	2	M6X12	In battery box
⑦	Gasket	2	∅ 6	In battery box
⑧	Washer	2	M6	In battery box
⑨	Seat cushion	1		On motorcycle
⑩	Wire, power	1	Red	On motorcycle
⑪	Wire, motor	1	Red	On motorcycle
⑫	Wire, earth	1	Black	On motorcycle

INSTALL STEP:

- 1, Fill ② into ③ refer to the instruction of battery, close down the battery with ①.
 - 2, Open ⑨, take down ⑤ from ④.
 - 3, connect ⑩ and ⑪ on the anode of ③ with ⑥, ⑦ and ⑧, connect ⑫ on the cathode of ③ with ⑥, ⑦ and ⑧.
ATTENTION: ⑦ must be put above on the anode and cathode, ⑧ must put inside the anode and cathode.
 - 4, put ③ into ④'s slot.
 - 5, replace ⑤.
- You should wait for about 30 minutes after fill the electrolyte, then the battery can be put into use.

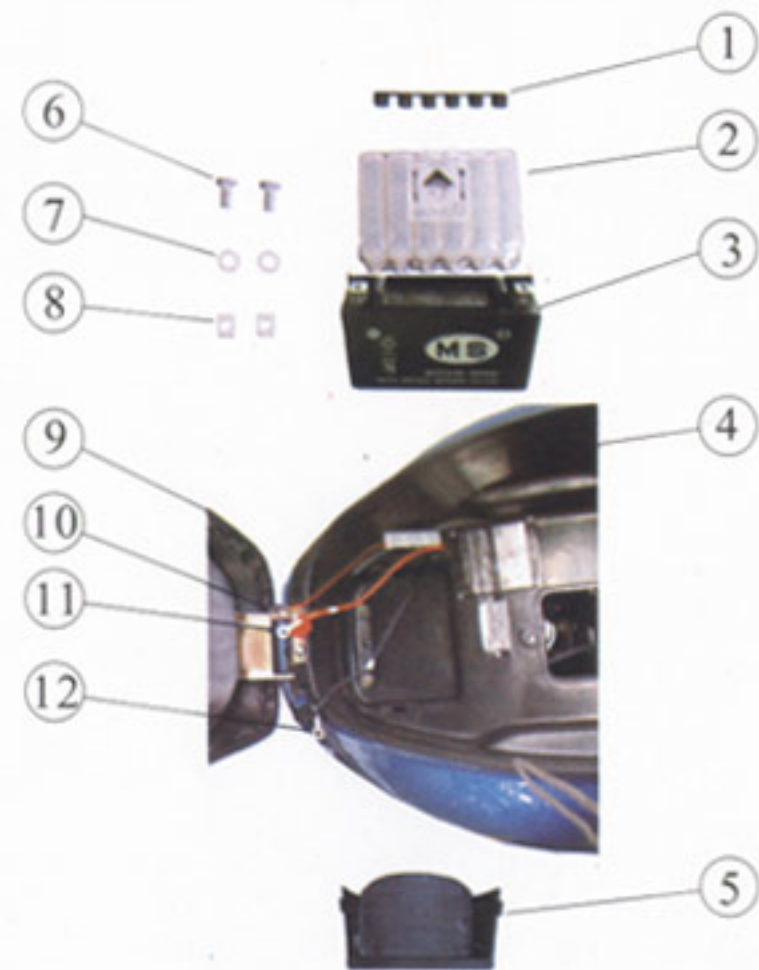

INSTALLMENT OF HEADLIGHTS (STEP 1)

S/N	Description	Quantity	Specification	Place	Torque
①	Headlight	1		On ④	
②	Nut	1	M8	On ④	
③	Bolt	1	M8×40	On ④	
④	Headlight fixing holder	1		On motorcycle	

INSTALL STEP:

1. Screw ② and ③ out, adjusting ① to proper angle, then penetrate ③ through ① and ④'s fixing hole, and screw ② back, and then fasten it.




INSTALLATION OF STEERING HANDLE AND SPEED-O-METER (STEP 3)

S/N	DESCRIPTION	QUANTITY	SPECIFICATION	REMARK
①	Steering handle	1		
②	Bolt	4	M8X38	In sundries box
③	Fixing hole 1	4		On ⑧
④	Speed-o-meter	1		On motorcycle
⑤	Fixing holder, lower	1		On motorcycle
⑥	Fixing hole 2	4		On motorcycle
⑦	Bolt	2	M5X12	In sundries box
⑧	Holder, upper	1		In sundries box
⑨	Fixing hole 3	2		On ⑧
⑩	Fixing hole 4	2		On ⑤

INSTALL STEP:

- 1, Put ① on ⑤, put ⑧ on ①, make sure ③ aim at ⑥.
ATTENTION: The patterns on ① should suit with ⑤ and ⑧.
- 2, Fix ⑧, ① and ⑤ together with ②. ② should go through ③ and ⑥.
ATTENTION: Adjust ① to proper angle before fasten ②. Check and sure ① installed firmly.
- 3, Put ④ on ⑧, make sure ④ aim at ⑩.
- 4, Fix ④ on ⑧ with ⑦, ⑦ should go through ⑨ and ⑩.

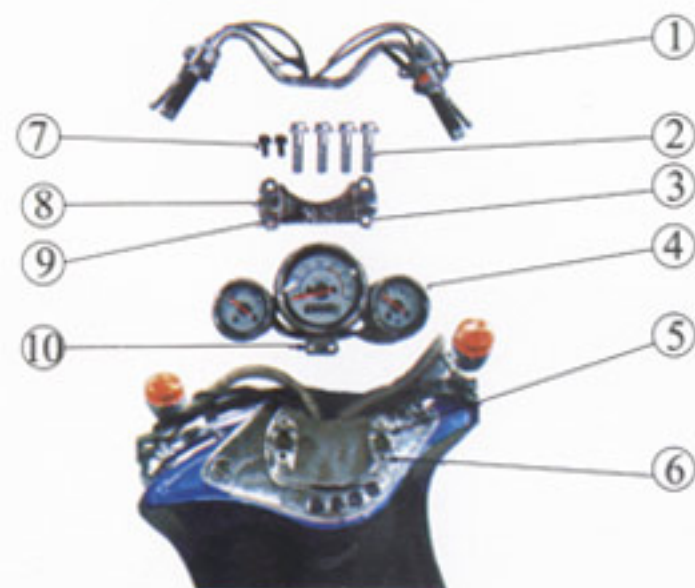

INSTALLATION OF REAR VIEW MIRROR(STEP 4)



S/N	Description	Quantity	Specification	Remark
①	L/R.RR. mirrior	2	ST4.8X16	In sundries box
②	Location,L/R.RR. mirrior	1		In sundries box

INSTALL STEP:

1 Install①on ② with screw(together with ①) respectively.

ATTENTION: Take care of the RIGHT and LEFT.

Before fastening,adjusting the point view of the mirror