

Assembly Instruction



Step 11
Take out the rubber block.



Step 12
Fit in the bushing (15mm) on the wheel.



Step 13
Axle go throught the front fork and the bushing(24mm).



Step 14
Tighten the axle nuts nuts.



Step 15
Take the split pin off and draw out the pin in the left footrest.



Step 16
Assemble the footrest and make sure the spring in correct way.



Step 17
Insert the split pin and cleft it. (another footrest is same way)



Step 18
Drew the foot brake little, make sure it under the adjust screws.

Assembly Instruction



Step 1
Take out the Dirt bike from carton.



Step 2
Take off the steel frame




Step 3
Loosen the four bolts from
up handle clamp.



Step 4
Put on the handle bar on the
down clamps.




Step 5
Lid the clamp and tighten the bolts.

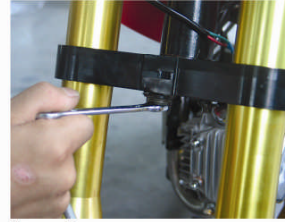

Step 6
Loosen the three nuts under
the steering stem.



Step 7
Assemble the front fender
on the steering stem.

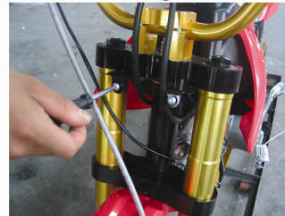

Step 8
Loosen the screws of front cover.



Step 9
Assemble the front cover and
tighten.



Step 10
Loosen and take out the axle nut
between front fork and steel frame.